

AIR CONDITIONER
Duct type

DESIGN & TECHNICAL MANUAL

INDOOR



ARGA30FMTA



ARGA36FMTA
ARGA45FMTA



ARGA60FHTA

OUTDOOR



AOGA30FBTAS



AOGA36FRTAS
AOGA45FRTAS
AOGA60FRTAS

Notices:

- Product specifications and design are subject to change without notice for future improvement.
- For further details, please check with our authorized dealer.

CONTENTS

Part 1. INDOOR UNIT	1
1. Product features	2
1-1. Model lineup	2
1-2. Features	2
2. Wired remote controller	4
2-1. Features	4
2-2. Overview	6
2-3. Specifications	7
2-4. Wring specifications	7
3. Specifications	8
4. Dimensions	10
4-1. Model: ARG30FMTA	10
4-2. Models: ARG36FMTA and ARG45FMTA	11
4-3. Model: ARG60FHTA	12
4-4. Installation space requirement	13
4-5. Maintenance space requirement	14
5. Wiring diagrams	17
5-1. Model: ARG30FMTA	17
5-2. Models: ARG36FMTA and ARG45FMTA	18
5-3. Model: ARG60FHTA	19
6. Capacity table	20
6-1. Cooling capacity	20
7. Fan performance	22
7-1. Fan performance curve	22
8. Operation noise (sound pressure)	30
8-1. Noise level curve	30
8-2. Sound level check point	32
9. Safety devices	33
10. External input and output	34
10-1. Control input (Operation/Stop or Forced stop)	34
10-2. External output	36
11. Function settings	39
11-1. Function settings on indoor unit	39
11-2. Function settings by using remote controller	43
11-3. Function settings on wired remote controller	48
12. Optional parts	49
12-1. Others	49

CONTENTS

Part 2. OUTDOOR UNIT..... 50

1. Specifications	51
2. Dimensions	53
2-1. Model: AOGA30FBTAS	53
2-2. Models: AOGA36FRTAS, AOGA45FRTAS, and AOGA60FRTAS	54
2-3. Installation space requirement	55
3. Refrigerant circuit	61
3-1. Model: AOGA30FBTAS	61
3-2. Models: AOGA36FRTAS, AOGA45FRTAS, and AOGA60FRTAS	62
4. Wiring diagrams	63
4-1. Model: AOGA30FBTAS	63
4-2. Models: AOGA36FRTAS, AOGA45FRTAS, and AOGA60FRTAS	64
5. Capacity compensation rate for pipe length and height difference	65
5-1. Model: AOGA30FBTAS	65
5-2. Models: AOGA36FRTAS, AOGA45FRTAS, and AOGA60FRTAS	66
6. Additional charge calculation	67
6-1. Model: AOGA30FBTAS	67
6-2. Models: AOGA36FRTAS and AOGA45FRTAS	67
6-3. Model: AOGA60FRTAS	67
7. Airflow	68
7-1. Model: AOGA30FBTAS	68
7-2. Models: AOGA36FRTAS, AOGA45FRTAS, and AOGA60FRTAS	68
8. Operation noise (sound pressure)	69
8-1. Noise level curve	69
8-2. Sound level check point	71
9. Electrical characteristics	72
10. Safety devices	73

Part 1. INDOOR UNIT

**DUCT TYPE:
ARGA30FMTA
ARGA36FMTA
ARGA45FMTA
ARGA60FHTA**

1. Product features

Implemented core technology provides easy-to-use product operations that realize a comfortable space.

1-1. Model lineup



ARGA30FMTA



AOGA30FBTAS



ARGA36FMTA
ARGA45FMTA




ARGA60FHTA



AOGA36FRTAS
AOGA45FRTAS
AOGA60FRTAS

1-2. Features

■ High efficiency technology

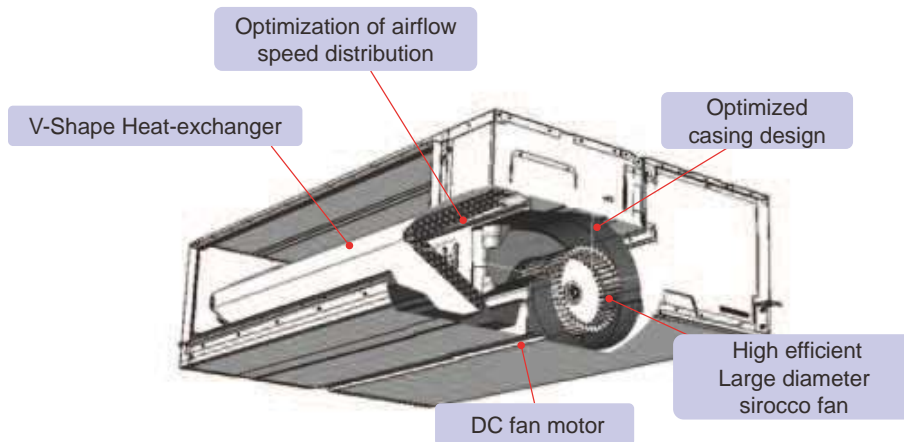

■ Powerful air flow




■ Low noise

Top class operating sound level in cooling operation is provided among the major competitors.




■ High install ability long piping correspondence (AR36,45,60)

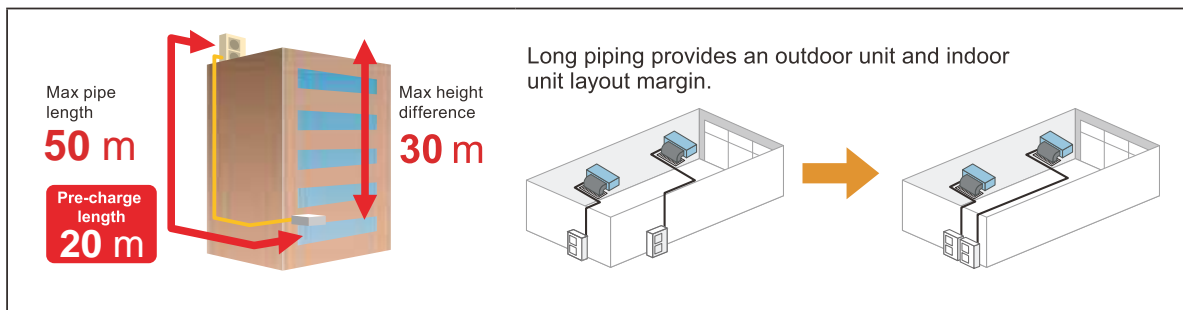


■ Separated indoor unit (AR60 only)

The indoor unit can be moved into the ceiling space through the designated opening.

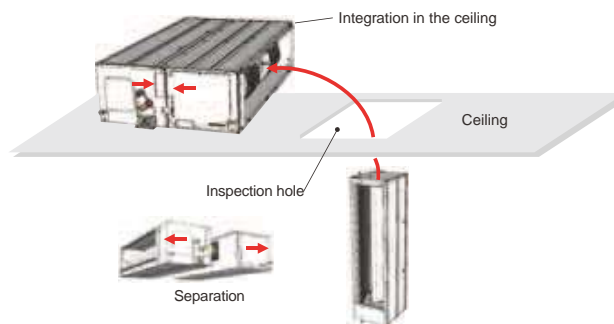

2. Wired remote controller

2-1. Features

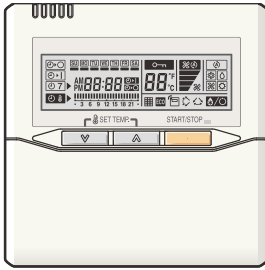

- Various timer setup available (on, off, and weekly).
- Equipped with weekly timer as standard function. (Start/stop function is twice per day for a week.)
- When setting up the timer, operation mode and temperature setup can be changed.
- When a failure occurs, the error code is displayed.
- Error history. (Last 16 error codes can be accessed.)
- The room temperature can be controlled by detecting the temperature accurately with built-in thermo sensor.

■ High performance and compact size



■ Simple function setting


Setting for selecting function of the air conditioner is performed by remote controller.

■ Accurate and comfortable






Indoor temperature can be detected accurately by the inclusion of a thermo sensor in the body of the wired controller.

Our system can correspond to various scenes.

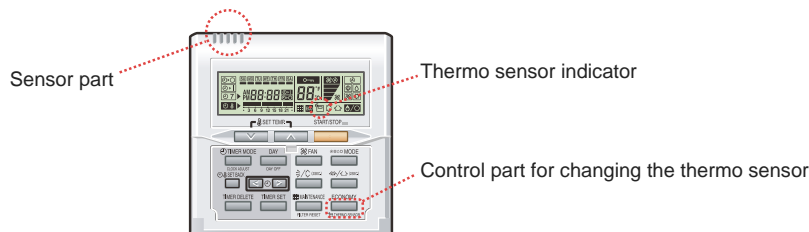This wired remote controller and the optional remote sensor allows flexibility in sensor location, and suitable for all requirements.

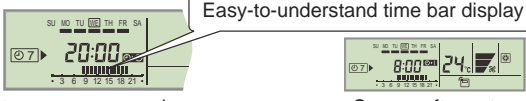


■ Built-in timers

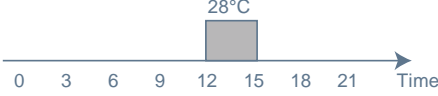Weekly timer	Setback timer
Possible to set on/off time to operate twice each day of the week.	Possible to set temperature for two time spans and for each day of the week.
 <p>Easy-to-understand time bar display</p> <p>Setup screen example (Set to Wednesday: 8:00 to 20:00.)</p> <p>Screen after setup</p> 	 <p>Setup screen example (Set from Sunday to Saturday: 12:00 to 15:00, 28 °C.)</p> 
At "Weekly timer" + "Set back timer" setup	
	

■ Easy-to-understand operation


[Variable timer control]

The operation/display sections are zoned according to time and operation, enabling variable programming to match application.

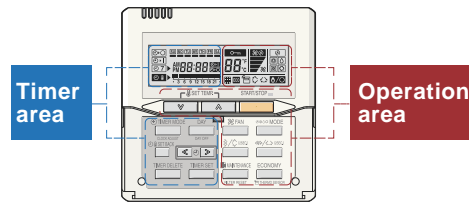


■ Simple installation

Components are compatible with standard switch boxes. Flat-back surface allows equipment to be installed wherever it is needed.

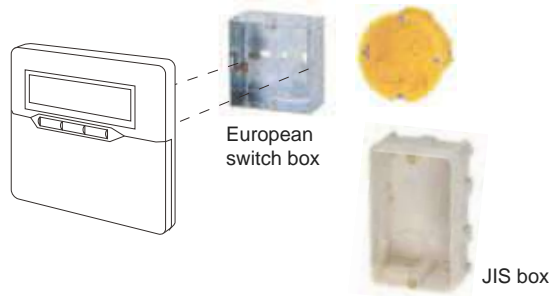


■ System diagram

1 remote controller

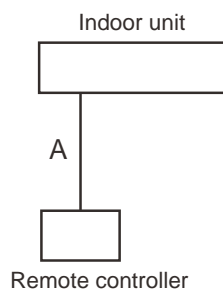








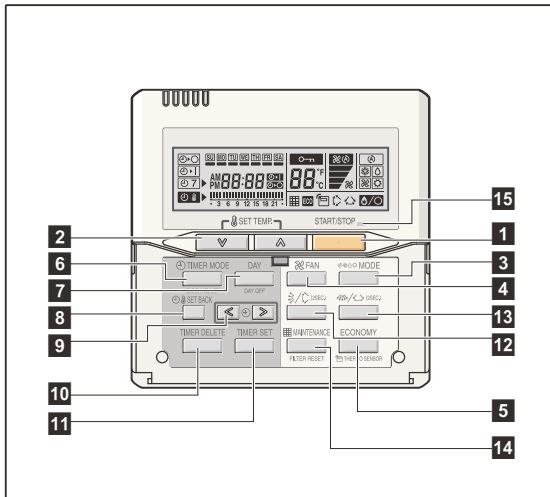




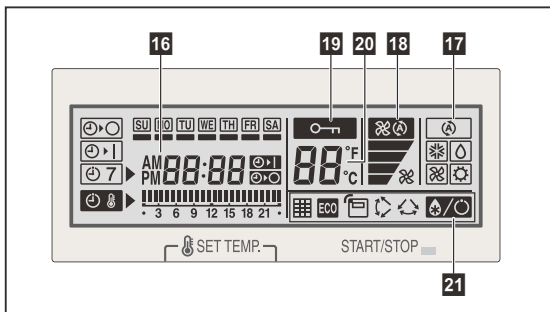


A: Remote controller cable
A ≤ 500 m

2-2. Overview



Display panel




- 1 START/STOP button**
Starts and stops operation.
- 2 SET TEMP. button**
Selects the setting temperature.
- 3 MODE button**
Selects the operating mode (AUTO , FAN , COOL , and DRY ).
- 4 FAN button**
Selects the fan speed AUTO , QUIET , LOW , MED , and HIGH .
- 5 ECONOMY (THERMO SENSOR) button**
Turns the economy-efficient mode on and off.
- 6 TIMER MODE (CLOCK ADJUST) button**
Selects the timer mode (off timer, on timer, and weekly timer). Sets the current time.
- 7 DAY (DAY OFF) button**
Temporarily cancels one day timer.
- 8 SET BACK button**
Selects the set back timer.
- 9 Set time button**
Pressed to set time.
- 10 TIMER DELETE button**
Deletes the weekly timer schedule.
- 11 TIMER SET button**
Sets the date, hour, minute, and on-off time.
- 12 Vertical airflow direction and swing button**
Push for 2 seconds to change the swing mode.
- 13 Horizontal airflow direction and swing button**
Push for 2 seconds to change the swing mode.
- 14 FILTER RESET button**
- 15 Operation lamp**
Lights during operation and when the timer is on.
- 16 Timer and clock indicator**
- 17 Operation mode indicator**
- 18 Fan speed indicator**
- 19 Operation lock indicator**
- 20 Temperature indicator**
- 21 Function indicators**
 -  Defrost indicator
 -  Thermo sensor indicator
 -  Economy indicator
 -  Vertical swing indicator
 -  Horizontal swing indicator
 -  Filter indicator

NOTE: Functions may differ by type of the indoor unit.
For details, refer to the operation manual.

2-3. Specifications

Dimensions and other specifications on the wired remote controller are as follows.

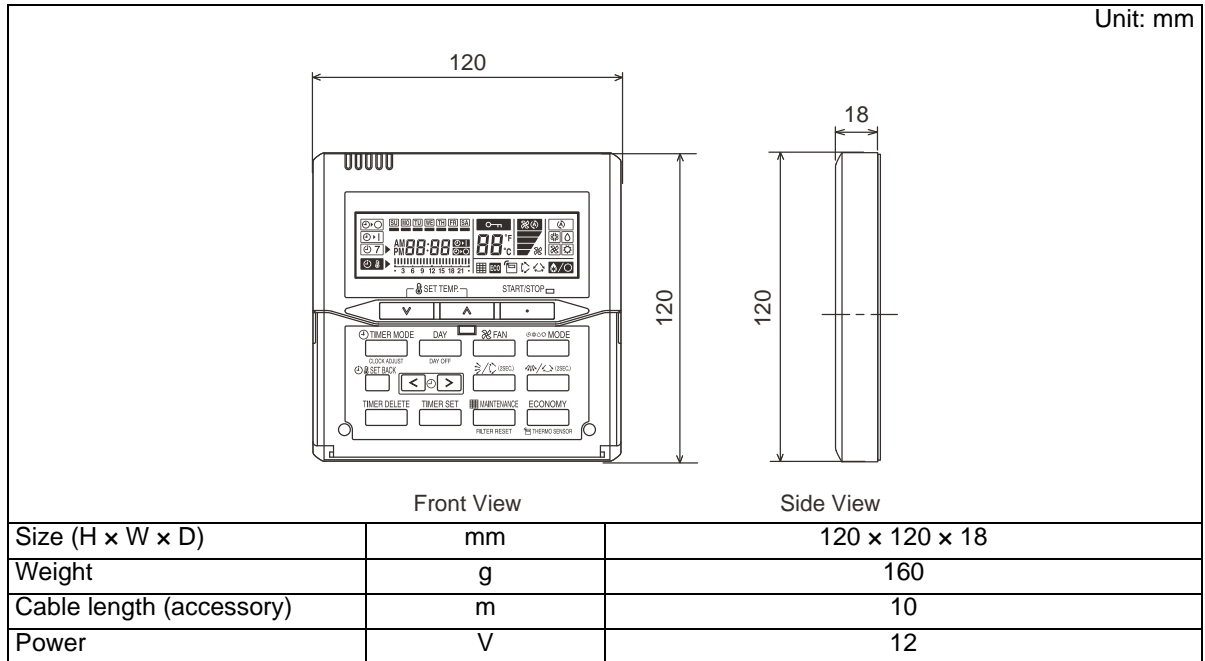

2-4. Wiring specifications

Use	Cable size	Wire type	Remarks
Remote controller cable	0.33 mm ² (22 AWG)	Polar 3-core	Use sheathed PVC cable.

3. Specifications

Type				Duct	
				Cooling only	
Model name				ARGA30FMTA	
Power supply				220—240 V ~ 50 Hz	
Available voltage range				198—264 V	
Cooling (T1 condition)					
Capacity		kW		8.3—8.3	
		Btu/h		28400—28400	
Input power		kW		2.40—2.46	
Current		A		11.3—11.1	
EER		Btu/hW		11.83—11.54	
Sensible capacity		kW		6.68—6.68	
Power factor		%		96.5—92.3	
Moisture removal		L/h (pints/h)		2.3—2.3 (4.0—4.0)	
Maximum operating current *1		Cooling		A	
				23.0	
Fan	Airflow rate	Cooling	HIGH	m ³ /h	1600
			MED		1500
			LOW		1400
			QUIET		1250
	Type x Q'ty	Sirocco fan x 2			
Motor output		W		197	
Recommended static pressure				Pa	
				30 to 120	
Sound pressure level *2		Cooling	HIGH	dB(A)	35
			MED		34
			LOW		32
			QUIET		29
Heat exchanger type		Dimensions (H x W x D)		mm	
				420 x 758 x 39.9	
		Fin pitch		mm	
				1.4	
		Rows x Stages			
		Pipe type		Copper	
		Fin type		Aluminum	
Enclosure		Material		Steel	
		Color		—	
Dimensions (H x W x D)		Net		mm	
				300 x 1000 x 700	
		Gross		400 x 1238 x 875	
Weight		Net		kg	
				35	
		Gross		43	
Connection pipe		Size		Liquid	mm (in)
				Gas	
		Method			
				Flare	
Operation range		Cooling		°C	18 to 32
				%RH	80 or less
Remote controller type				Wired	
Drain hose				Material	
				Size	
				mm	
				Ø 25 (I.D.), Ø 32 (O.D.)	

NOTES:


- Specifications are based on the following conditions:
 - Cooling (T1): Indoor temperature of 27 °CDB/19 °CWB, and outdoor temperature of 35 °CDB/24 °CWB.
 - Standard static pressure: 47 Pa
 - Pipe length: 7.5 m, Height difference: 0 m. (Between outdoor unit and indoor unit.)
- Protective function might work when using it outside the operation range.
- *1: Maximum current is the maximum value when operated within the operation range.
- *2: Sound pressure level: Measured after a 2-m duct to the outlet port and a 1-m duct to the suction port are installed.
 - Measured values in manufacturer's anechoic chamber.
 - Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.

Type		Duct				
		Cooling only				
Model name		ARGA36FMTA	ARGA45FMTA	ARGA60FHTA		
Power supply		3N 380—415 V ~ 50 Hz				
Available voltage range		342—457 V				
Cooling (T1 condition)						
Capacity	kW	10.3—10.3	13.5—13.5	15.2—15.2		
		Btu/h	35000—35000	46000—46000	52000—52000	
	kW	3.01—3.01	4.00—4.00	4.47—4.47		
	A	5.2—5.0	6.9—6.5	7.8—7.5		
	Btu/hW	11.63—11.63	11.50—11.50	11.63—11.63		
	kW	8.54—8.54	10.8—10.8	12.92—12.92		
	%	87.9—83.8	88.1—85.6	87.1—82.9		
Moisture removal	L/h (pints/h)	3.0—3.0 (5.3—5.3)	3.3—3.3 (5.8—5.8)	3.4—3.4 (6.0—6.0)		
Maximum operating current *1	Cooling	A	10.5	14.0	15.5	
Fan	Airflow rate	Cooling	HIGH	2000	2500	3350
			MED	1850	2350	3150
			LOW	1650	2200	2950
			QUIET	1500	2000	2650
	Type x Q'ty	Sirocco fan x 3			Sirocco fan x 2	
	Motor output	W	197		375	
Recommended static pressure		Pa	30 to 120		60 to 160	
Sound pressure level *2	Cooling	HIGH	37	40	41	
		MED	35	38	40	
		LOW	34	37	39	
		QUIET	32	35	38	
Heat exchanger type	Dimensions (H x W x D)	mm	420 x 1158 x 39.9		546 x 1158 x 39.9	
	Fin pitch		1.4		1.3	
	Rows x Stages		3 x 20		3 x 26	
	Pipe type		Copper			
	Fin type		Aluminum			
Enclosure	Material		Steel			
	Color		—			
Dimensions (H x W x D)	Net	mm	300 x 1400 x 700		360 x 1400 x 850	
	Gross		400 x 1638 x 875		460 x 1640 x 1030	
Weight	Net	kg	44		67	
	Gross		53		77	
Connection pipe	Size	Liquid	Ø 9.52 (Ø 3/8)			
		Gas	Ø 19.05 (Ø 3/4)			
	Method		Flare			
Operation range	Cooling	°C	18 to 32			
		%RH	80 or less			
Remote controller type			Wired			
Drain hose	Material		PVC			
	Size	mm	Ø 25 (I.D.), Ø 32 (O.D.)			
NOTES:						
<ul style="list-style-type: none"> • Specifications are based on the following conditions: <ul style="list-style-type: none"> – Cooling (T1): Indoor temperature of 27 °CDB/19 °CWB, and outdoor temperature of 35 °CDB/24 °CWB. – Standard static pressure: 60 Pa – Pipe length: 7.5 m, Height difference: 0 m. (Between outdoor unit and indoor unit.) • Protective function might work when using it outside the operation range. • *1: Maximum current is the maximum value when operated within the operation range. • *2: Sound pressure level: Measured after a 2-m duct to the outlet port and a 1-m duct to the suction port are installed. <ul style="list-style-type: none"> – Measured values in manufacturer's anechoic chamber. – Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here. 						


4. Dimensions

4-1. Model: ARGA30FMTA

Unit: mm

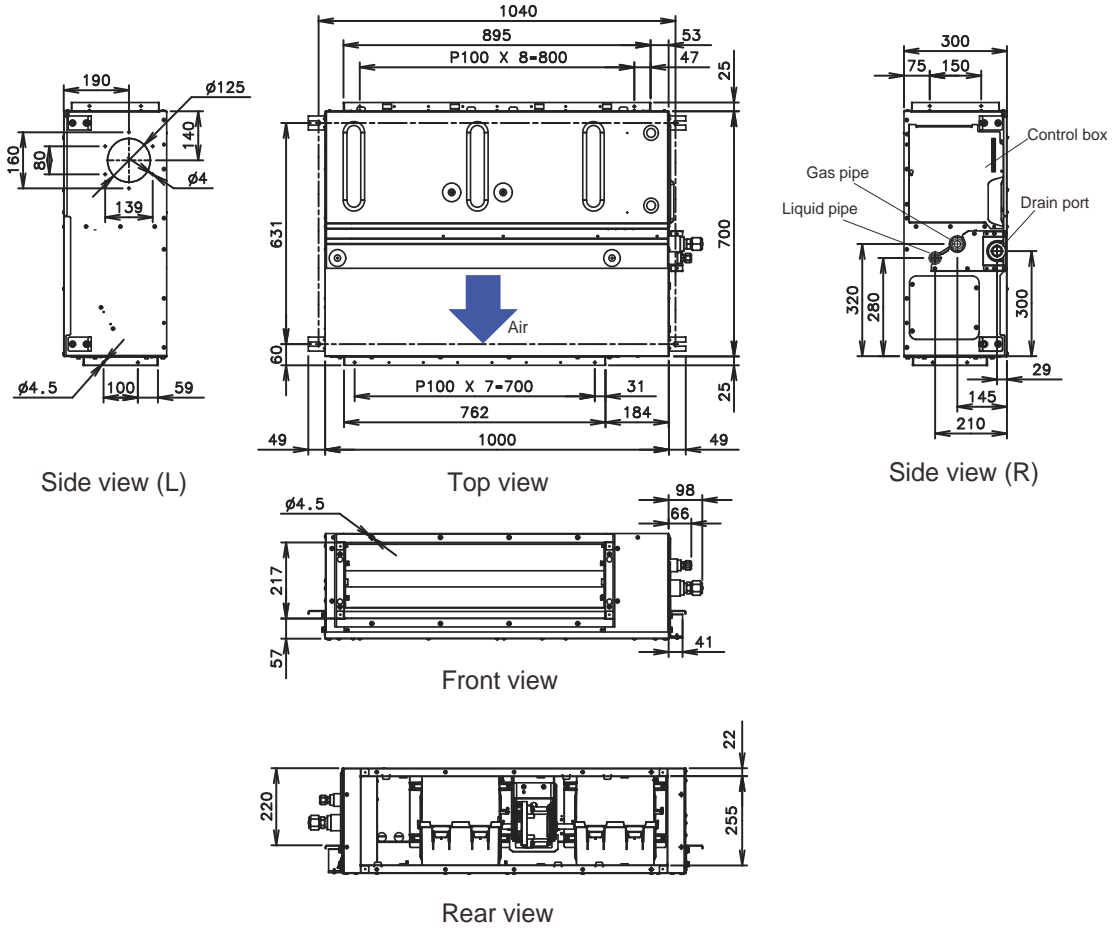


4-2. Models: ARGA36FMTA and ARGA45FMTA

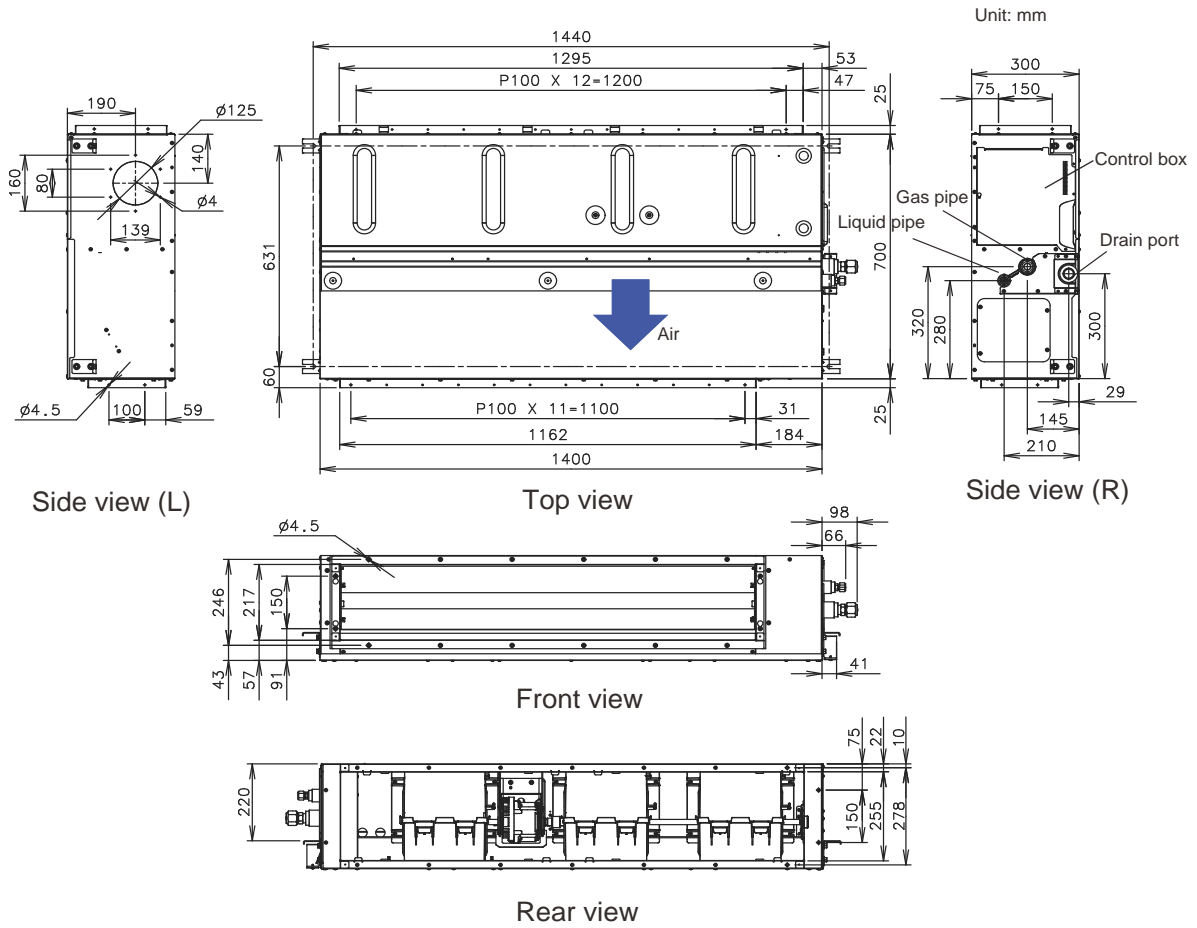

4-3. Model: ARGA60FHTA


Unit: mm

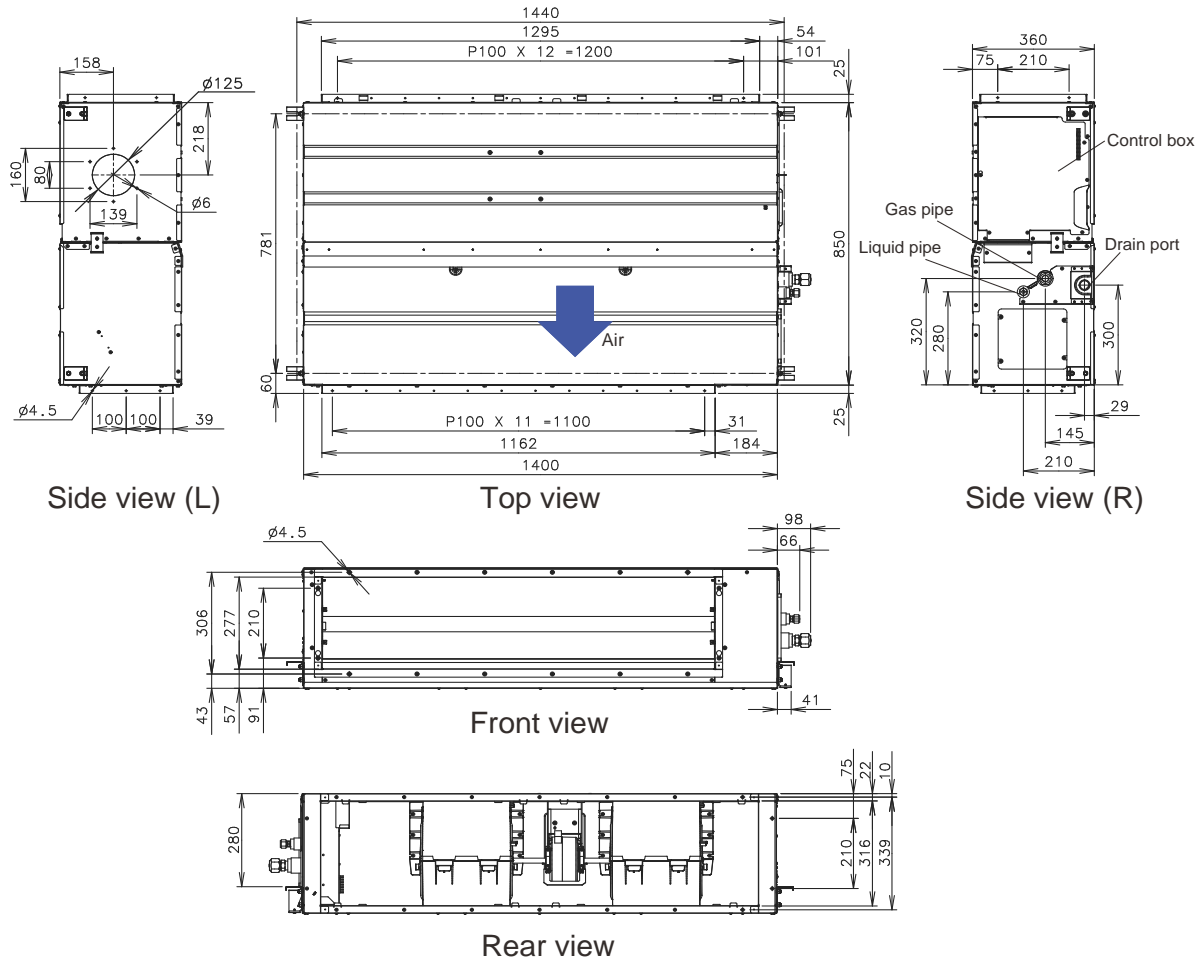

4-4. Installation space requirement


Provide sufficient installation space for product safety.

■ Models: ARGA30FMTA, ARGA36FMTA, and ARGA45FMTA

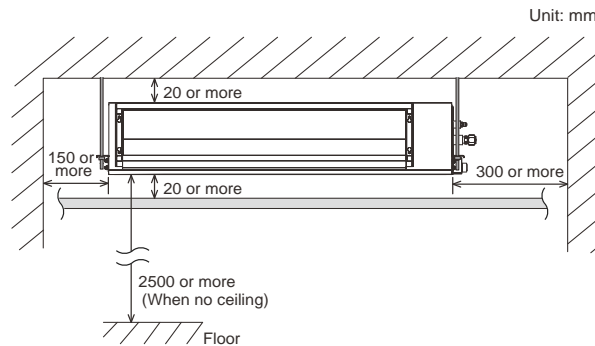


■ Model: ARGA60FHTA

- Installation by which service space is made on top of the unit (recommended):

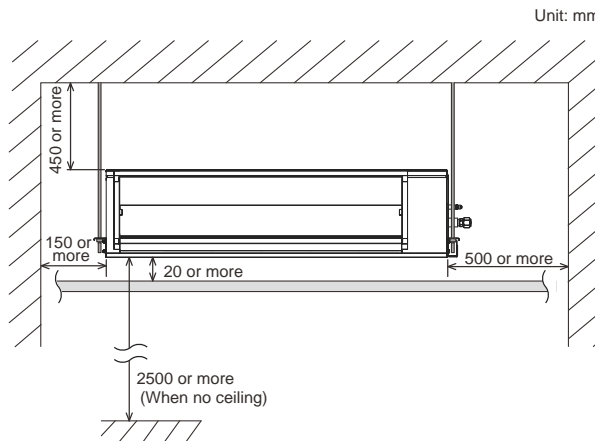

- Installation by which service is carried out from the bottom of the unit:

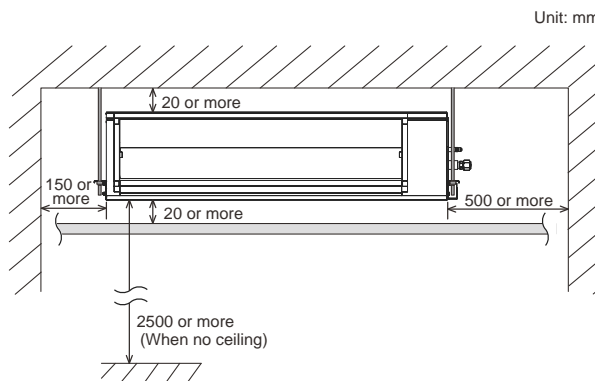


4-5. Maintenance space requirement

For future maintenance and service access, provide sufficient maintenance space.


NOTE: Do not place any wiring or illumination in the maintenance space, as they will impede service.

■ Model: ARGA30FMTA

- Provide a service access for maintenance purposes.

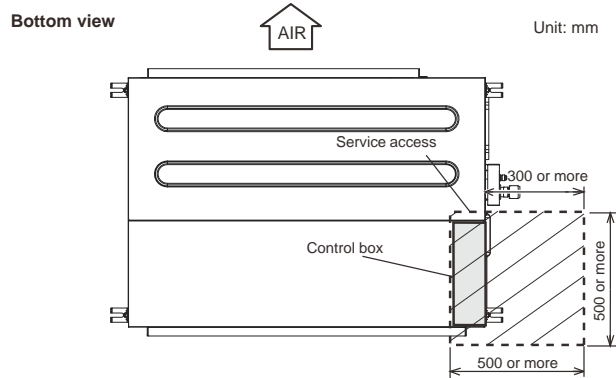


- The service access necessary for fan units and filter maintenance.

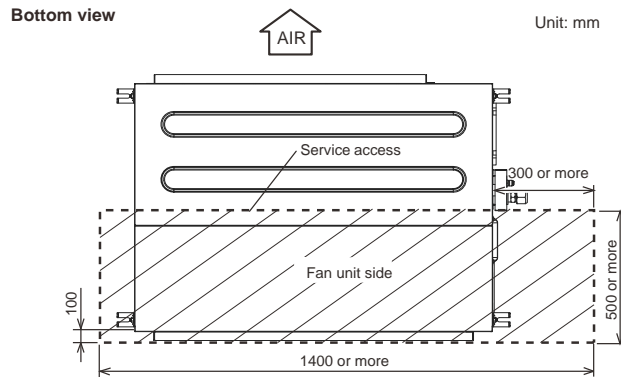


■ Models: ARG36FMTA and ARG45FMTA

- Provide a service access for maintenance purposes.

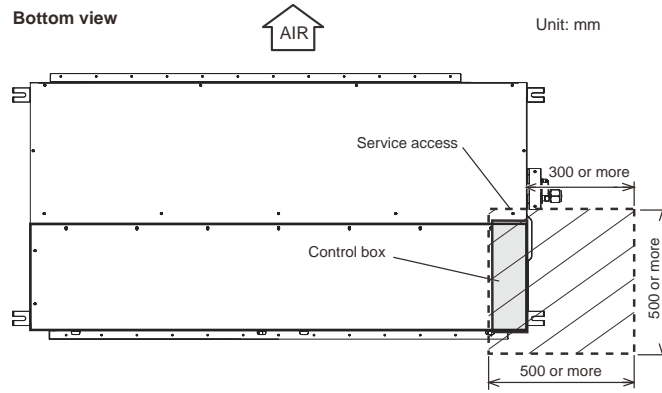


- The service access necessary for fan units and filter maintenance.

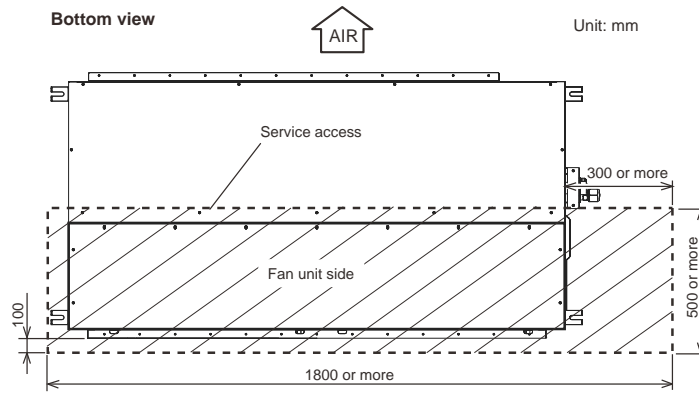

Model: ARGA60FHTA


Unit: mm

Bottom view

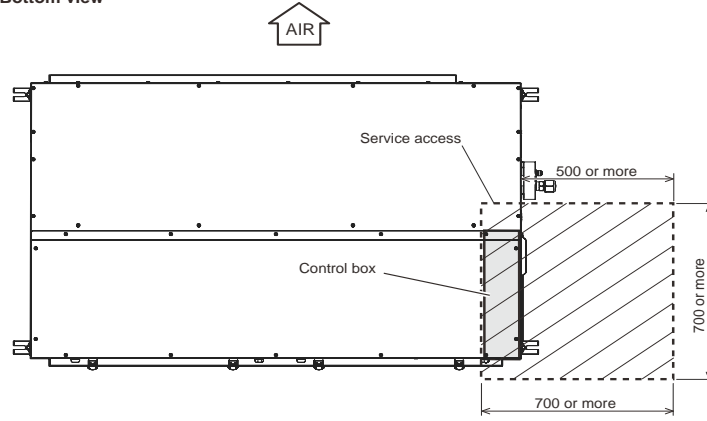


Bottom view

Unit: mm

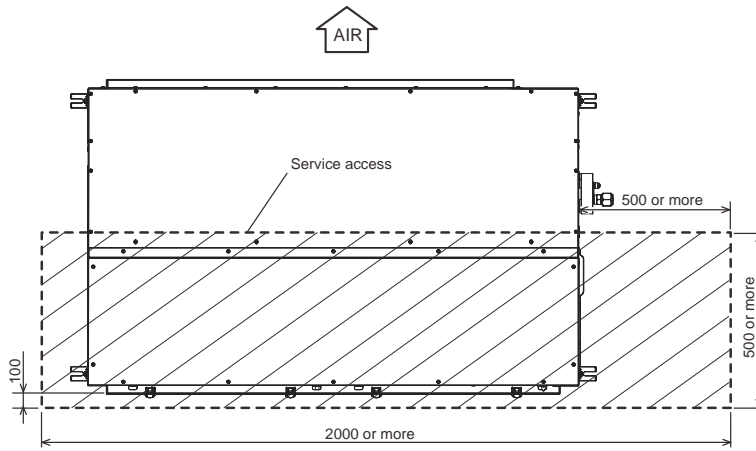


5. Wiring diagrams


5-1. Model: ARGA30FMTA

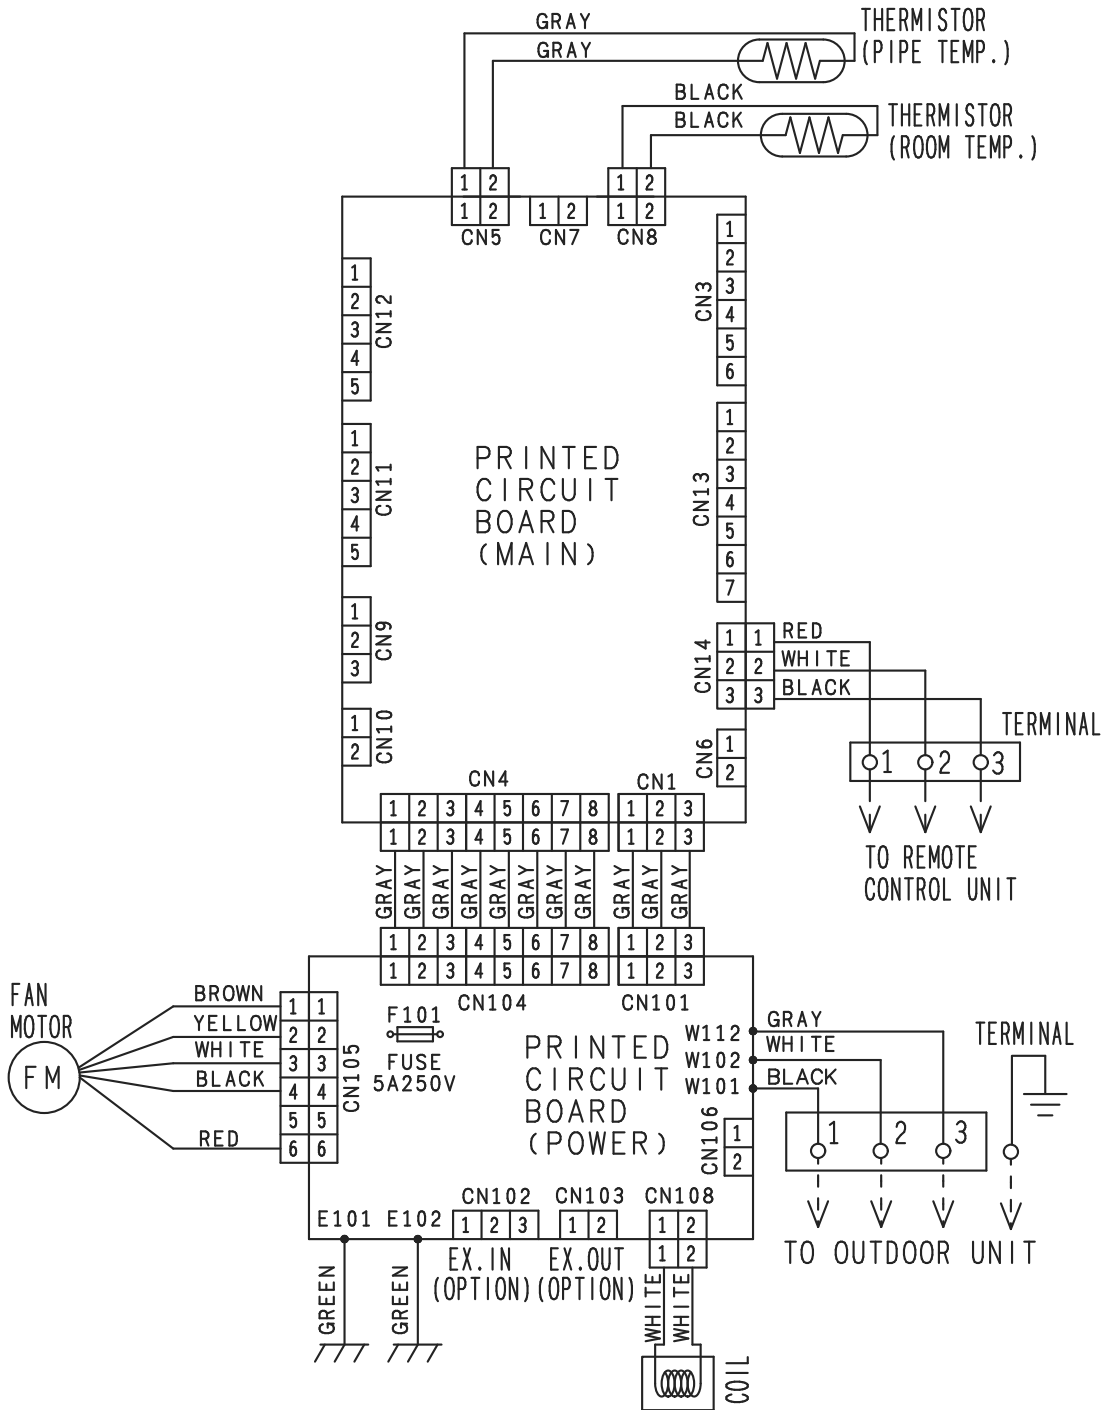

5-2. Models: ARGA36FMTA and ARGA45FMTA

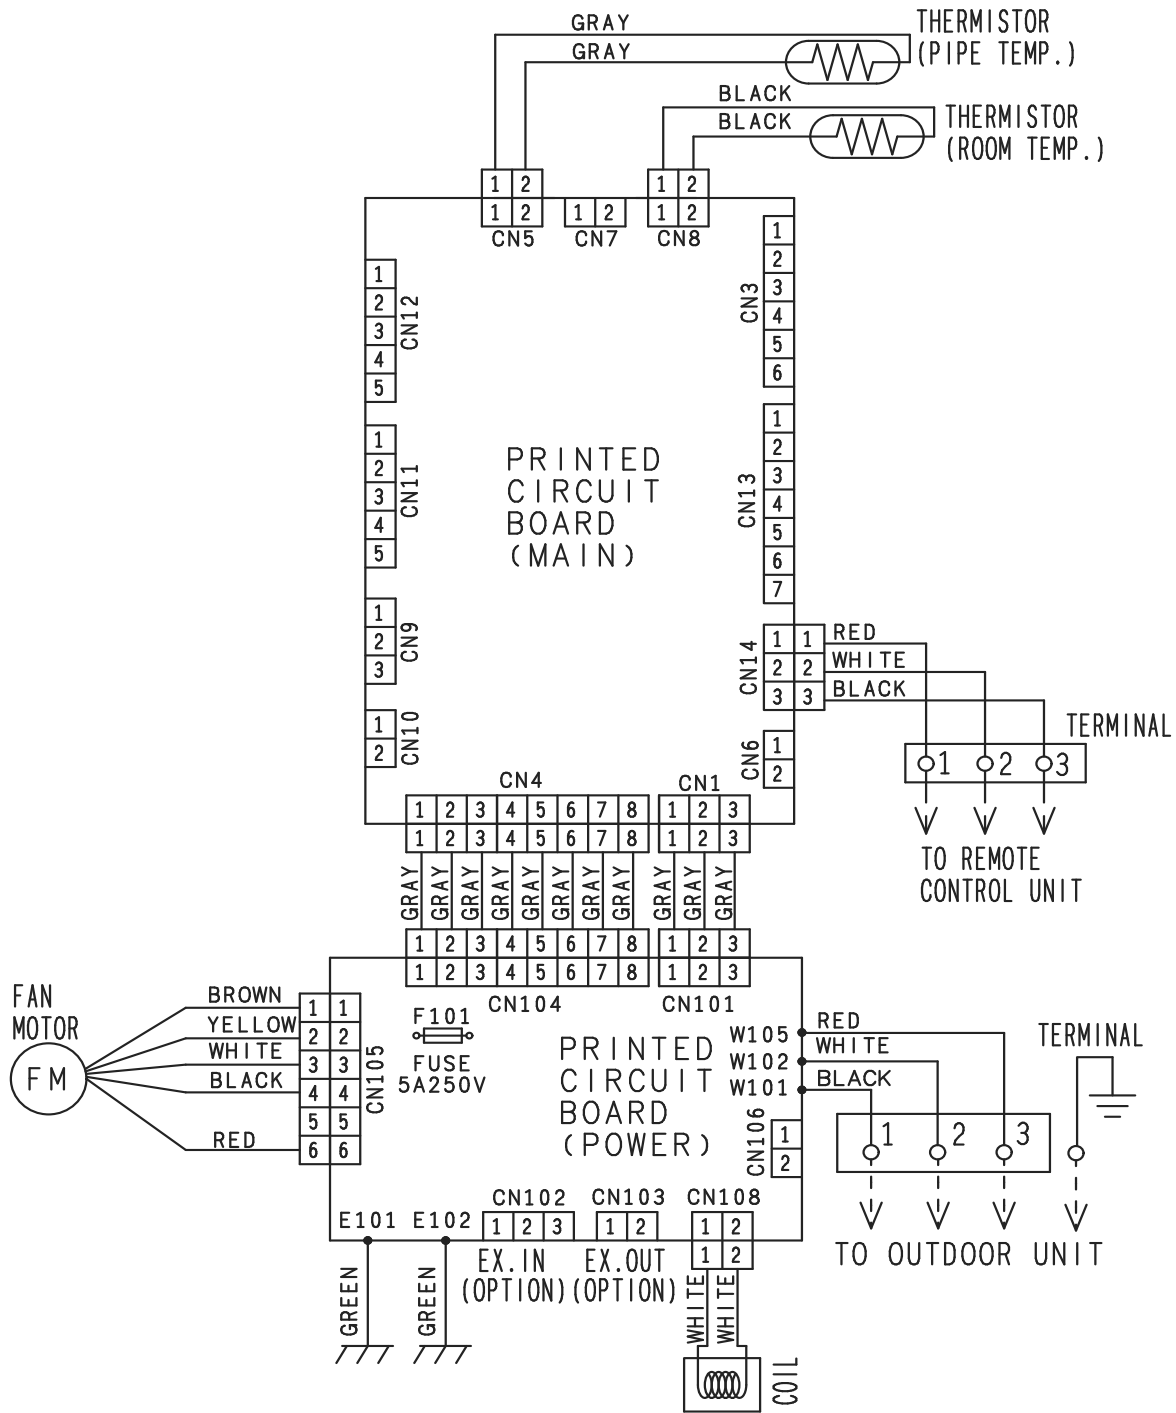

5-3. Model: ARG60FHTA

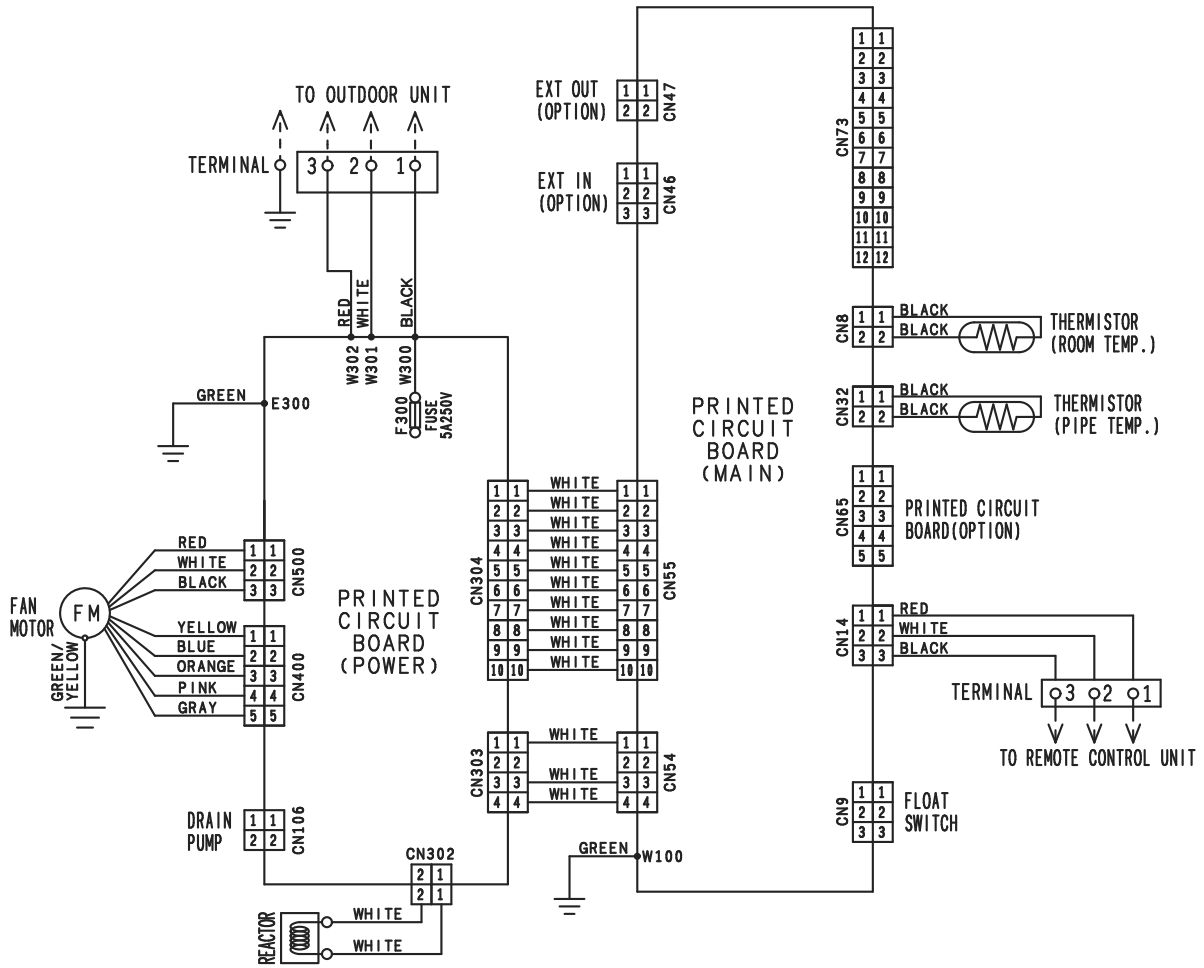

6. Capacity table

Capacity tables show each of following values calculated based on the outdoor temperature and the indoor temperature, under given Airflow Rate (AFR):

For cooling capacity: Total Capacity (TC), Sensible Heat Capacity (SHC), and Input Power (IP)
1 kW = 3412 Btu/h

6-1. Cooling capacity

■ Model: ARGA30FMTA

AFR		m ³ /h												1600								
Outdoor temperature	Indoor temperature																					
	°CDB	18			21			23			25			27			29			32		
	°CWB	12			15			16			18			19			21			23		
	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kW			kW			kW			kW			kW			kW			kW		
	21	6.92	5.87	1.84	7.85	6.41	1.84	8.13	6.54	1.84	8.66	6.75	1.85	8.89	6.83	1.87	9.34	6.91	1.86	9.73	6.92	1.87
	25	6.85	5.86	2.00	7.77	6.39	2.00	8.05	6.52	2.00	8.57	6.73	2.01	8.80	6.81	2.03	9.25	6.89	2.02	9.64	6.90	2.03
	30	6.70	5.80	2.18	7.60	6.32	2.18	7.87	6.46	2.19	8.38	6.66	2.19	8.61	6.74	2.22	9.05	6.82	2.21	9.42	6.82	2.22
	35	6.46	5.75	2.39	7.33	6.27	2.39	7.59	6.40	2.40	8.08	6.61	2.40	8.30	6.68	2.43	8.72	6.76	2.42	9.09	6.77	2.43
	40	6.07	5.59	2.54	6.88	6.10	2.54	7.13	6.23	2.55	7.59	6.43	2.55	7.80	6.50	2.58	8.20	6.58	2.57	8.54	6.59	2.58
46	5.56	5.35	2.85	6.31	5.83	2.86	6.54	5.96	2.86	6.96	6.15	2.87	7.15	6.22	2.90	7.51	6.29	2.89	7.83	6.30	2.90	
50	5.16	5.15	3.08	5.85	5.62	3.09	6.06	5.74	3.09	6.45	5.92	3.10	6.63	5.99	3.14	6.96	6.06	3.12	7.25	6.06	3.14	
52	4.93	5.04	3.21	5.60	5.50	3.21	5.80	5.61	3.21	6.17	5.79	3.22	6.34	5.86	3.26	6.66	5.93	3.24	6.94	5.93	3.26	

■ Model: ARGA36FMTA

AFR		m ³ /h												2000								
Outdoor temperature	Indoor temperature																					
	°CDB	18			21			23			25			27			29			32		
	°CWB	12			15			16			18			19			21			23		
	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kW			kW			kW			kW			kW			kW			kW		
	21	10.31	8.47	2.60	10.54	8.50	2.64	10.79	8.55	2.67	11.21	9.05	2.72	11.38	9.03	2.75	11.71	8.95	2.80	12.02	9.35	2.84
	25	10.72	8.72	2.43	10.99	8.76	2.46	11.23	8.81	2.48	11.65	9.30	2.52	11.83	9.26	2.53	12.15	9.17	2.57	12.44	9.55	2.59
	30	10.03	8.31	2.66	10.32	8.37	2.69	10.56	8.47	2.72	10.96	8.96	2.76	11.13	8.94	2.77	11.45	8.85	2.81	11.76	9.26	2.84
	35	9.34	7.97	2.91	9.52	8.03	2.92	9.76	8.08	2.95	10.12	8.57	2.99	10.30	8.54	3.01	10.63	8.49	3.05	10.95	8.93	3.09
	40	8.36	6.02	3.08	8.73	6.73	3.16	9.00	7.36	3.22	9.53	8.03	3.29	9.76	8.23	3.30	10.19	8.58	3.34	10.96	8.71	3.37
46	7.96	6.02	3.47	8.35	6.77	3.57	8.63	7.27	3.64	9.17	7.92	3.69	9.20	8.17	3.73	9.82	8.50	3.78	10.56	8.93	3.80	
50	6.87	5.93	3.68	7.45	6.47	3.80	7.68	6.83	3.89	8.21	7.42	3.98	8.13	7.63	3.97	8.77	8.04	4.04	9.49	8.71	4.04	
52	6.41	5.89	3.78	7.07	6.35	3.90	7.28	6.63	3.99	7.80	7.18	4.09	7.64	7.39	4.09	8.33	7.81	4.16	9.02	8.62	4.15	

■ Model: ARGA45FMTA

AFR		m ³ /h												2500								
Outdoor temperature	Indoor temperature																					
	°CDB	18			21			23			25			27			29			32		
	°CWB	12			15			16			18			19			21			23		
	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kW			kW			kW			kW			kW			kW			kW		
	21	13.51	10.69	3.45	13.81	10.74	3.51	14.14	10.80	3.55	14.69	11.45	3.62	14.92	11.41	3.65	15.35	11.31	3.72	15.74	11.81	3.77
	25	14.05	11.02	3.24	14.39	11.07	3.27	14.72	11.14	3.30	15.28	11.75	3.35	15.51	11.70	3.36	15.93	11.58	3.41	16.31	12.07	3.45
	30	13.16	10.52	3.55	13.53	10.58	3.58	13.84	10.70	3.60	14.36	11.32	3.65	14.60	11.29	3.68	15.01	11.19	3.73	15.42	11.70	3.78
	35	12.24	10.07	3.86	12.47	10.15	3.88	12.79	10.21	3.91	13.28	10.82	3.97	13.50	10.80	4.00	13.94	10.73	4.05	14.35	11.28	4.11
	40	10.96	7.61	4.10	11.44	8.51	4.20	11.80	9.31	4.28	12.49	10.15	4.36	12.79	10.41	4.38	13.32	10.86	4.45	14.37	11.02	4.48
46	10.31	7.51	4.56	10.80	8.46	4.69	11.17	9.09	4.77	11.86	9.90	4.88	11.90	10.20	4.89	12.70	10.61	4.96	13.67	11.16	4.99	
50	8.89	7.41	4.83	9.63	8.08	4.98	9.94	8.53	5.10	10.62	9.26	5.22	10.52	9.53	5.21	11.36	10.03	5.30	12.27	10.86	5.30	
52	8.28	7.35	4.96	9.15	7.93	5.12	9.42	8.28	5.25	10.10	8.97	5.37	9.89	9.22	5.36	10.78	9.75	5.45	11.66	10.75	5.44	

Model: ARG60FHTA

DUCT TYPE
ARGA30-60F

AFR	m ³ /h	3350
-----	-------------------	------

		Indoor temperature																				
		18			21			23			25			27			29			32		
		°CWB			15			16			18			19			21			23		
Outdoor temperature	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
	°CDB	kW			kW			kW			kW			kW			kW			kW		
	21	12.46	10.11	4.05	13.37	10.21	4.12	13.82	10.27	4.17	14.90	12.00	4.25	15.35	12.36	4.28	15.98	13.37	4.36	16.89	14.30	4.43
	25	15.18	9.71	3.64	15.52	11.35	3.70	15.86	12.22	3.73	16.60	13.20	3.79	16.93	13.43	3.82	17.58	13.78	3.85	18.86	13.98	3.94
	30	14.52	9.41	3.94	14.90	10.98	4.01	15.28	11.96	4.05	16.02	12.99	4.12	16.31	13.25	4.16	16.98	13.65	4.19	18.16	13.75	4.28
	35	13.90	8.81	4.22	13.90	10.66	4.31	14.38	11.44	4.35	15.13	12.46	4.43	15.20	12.92	4.47	16.25	13.06	4.50	17.35	13.54	4.60
	40	12.35	9.11	4.58	12.89	10.17	4.69	13.28	11.14	4.78	14.07	12.15	4.88	14.41	12.44	4.89	15.01	12.99	4.96	16.17	13.18	5.00
	46	11.51	8.93	5.06	12.07	10.04	5.20	12.47	10.78	5.30	13.26	11.74	5.41	13.30	12.11	5.42	14.20	12.60	5.50	15.27	13.23	5.54
	50	9.93	8.80	5.36	10.77	9.59	5.52	11.11	10.13	5.66	11.87	10.99	5.78	11.75	11.31	5.78	12.69	11.91	5.88	13.72	12.90	5.88
	52	9.27	8.73	5.50	10.22	9.40	5.68	10.53	9.83	5.82	11.28	10.65	5.95	11.06	10.94	5.94	12.04	11.59	6.04	13.05	12.77	6.04


7. Fan performance

7-1. Fan performance curve


■ Model: ARGA30FMTA

Fan speed	Item		Static pressure mode							
			Mode 1		Mode 2		Mode 3		Mode 4	
			Normal		High static pressure 1		High static pressure 2		High static pressure 3	
HIGH	Static pressure	Pa	30	55	60	75	90	100	110	120
	Airflow	m ³ /h	1820	1520	1600	1400	1530	1350	1400	1250
		l/s	506	422	444	389	425	375	389	347
		CFM	1071	894	941	824	900	794	824	735
MED	Static pressure	Pa	23	45	50	63	73	82	90	100
	Airflow	m ³ /h	1680	1400	1490	1310	1380	1240	1280	1150
		l/s	467	389	414	364	383	344	356	319
		CFM	988	824	876	771	812	729	753	676
LOW	Static pressure	Pa	16	38	42	53	59	67	72	81
	Airflow	m ³ /h	1540	1280	1360	1210	1270	1130	1170	1050
		l/s	428	356	378	336	353	314	325	292
		CFM	906	753	800	712	747	665	688	618
QUIET	Static pressure	Pa	10	29	34	42	44	52	56	64
	Airflow	m ³ /h	1370	1120	1210	1100	1110	980	1020	920
		l/s	381	311	336	306	308	272	283	256
		CFM	806	659	712	647	653	576	600	541

Factory setting is Mode 1.

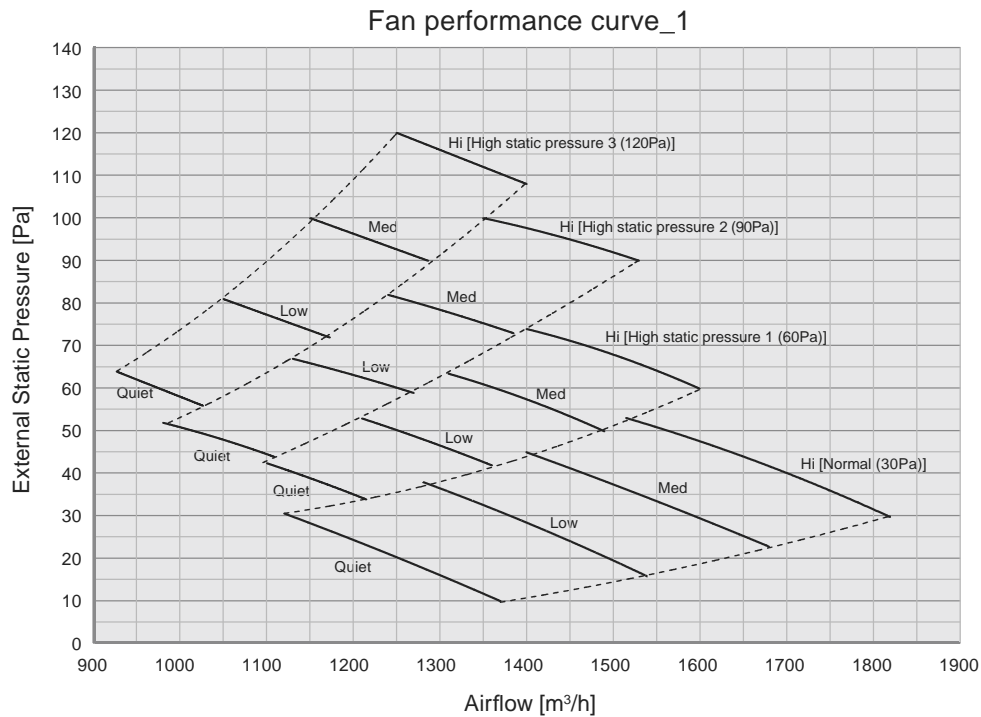

Fan performance curve_2
(For function setting by remote controller)

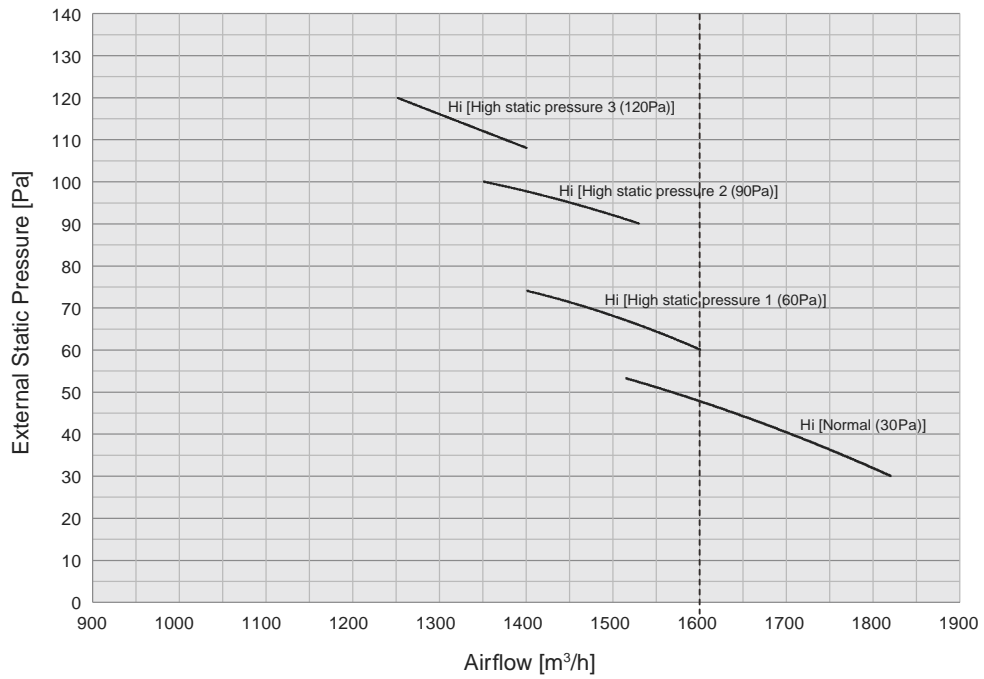


NOTES:

- Setting of the external static pressure is switchable into 4-stage modes by using the remote controller.
- According to the resistance of the connecting duct, perform the setting of the external static pressure with referring "Fan performance curve_2" above.
- The default setting is set at "Normal mode".

■ Characteristics of air volume and capacity

● Cooling

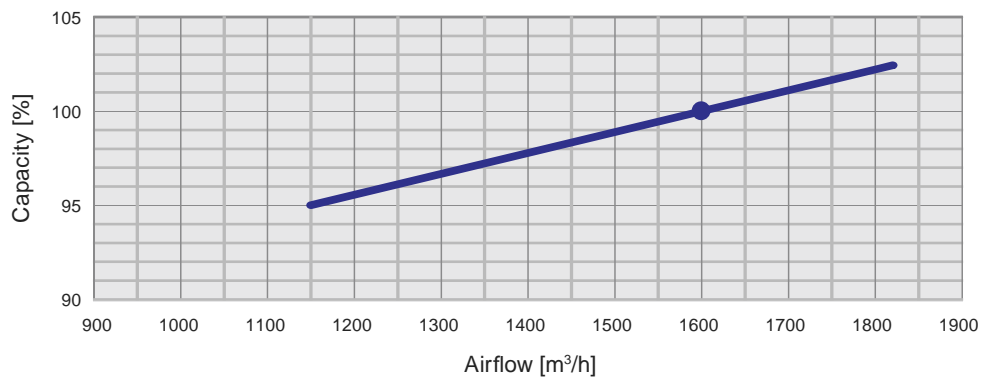


Model: ARGA36FMTA


Fan speed	Item		Static pressure mode							
			Mode 1		Mode 2		Mode 3		Mode 4	
			Low static pressure		Normal		High static pressure 1		High static pressure 2	
HIGH	Static pressure	Pa	30	45	60	75	90	105	115	120
	Airflow	m ³ /h	2000	1780	2000	1790	2000	1680	1760	1700
		l/s	556	494	556	497	556	467	489	472
		CFM	1176	1047	1176	1053	1176	988	1035	1000
MED	Static pressure	Pa	28	42	50	61	74	87	99	102
	Airflow	m ³ /h	1920	1710	1850	1650	1810	1530	1630	1580
		l/s	533	475	514	458	503	425	453	439
		CFM	1129	1006	1088	971	1065	900	959	929
LOW	Static pressure	Pa	24	35	38	47	63	74	83	86
	Airflow	m ³ /h	1790	1610	1650	1440	1670	1420	1490	1450
		l/s	497	447	458	400	464	394	414	403
		CFM	1053	947	971	847	982	835	876	853
QUIET	Static pressure	Pa	19	28	32	39	50	60	60	63
	Airflow	m ³ /h	1610	1440	1510	1310	1490	1280	1280	1230
		l/s	447	400	419	364	414	356	356	342
		CFM	947	847	888	771	876	753	753	724

Factory setting is Mode 2.

Fan performance curve_1

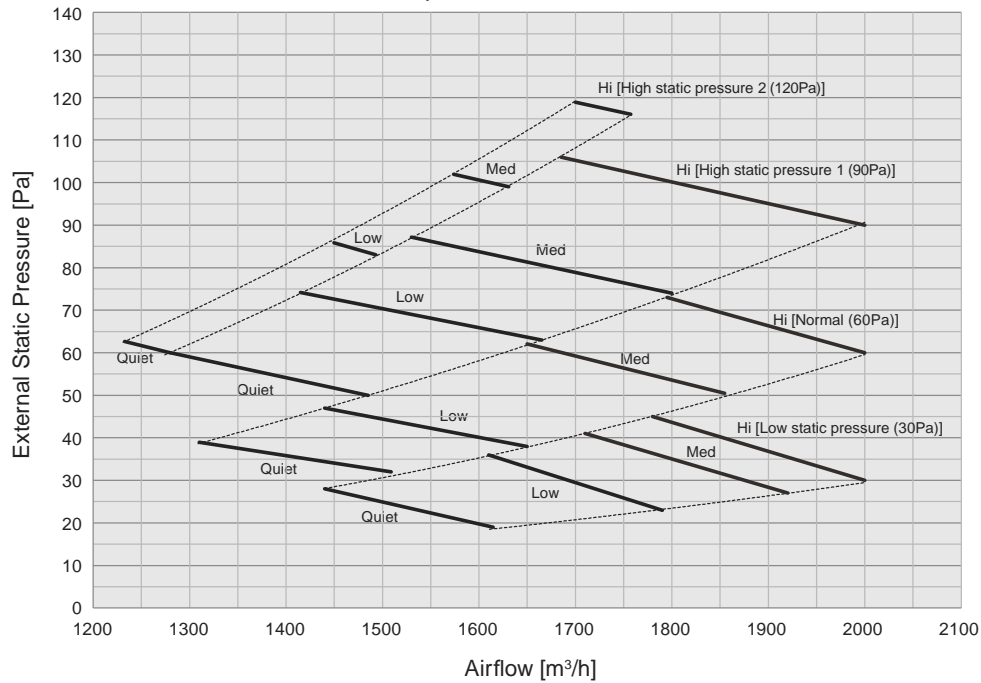

Fan performance curve_2
(For function setting by remote controller)

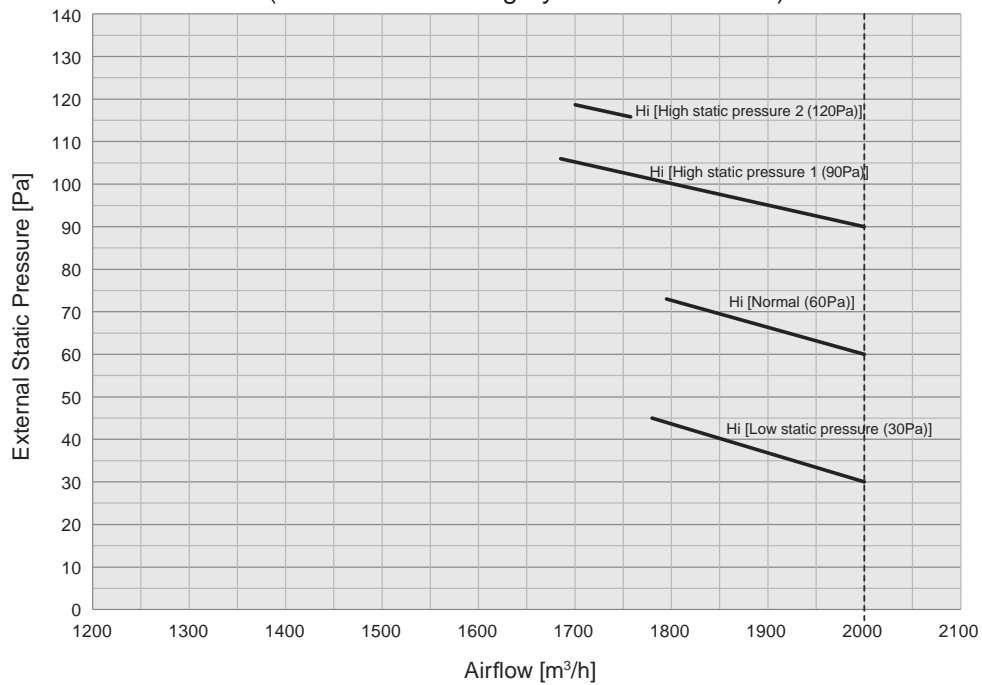


NOTES:

- Setting of the external static pressure is switchable into 4-stage modes by using the remote controller.
- According to the resistance of the connecting duct, perform the setting of the external static pressure with referring "Fan performance curve_2" above.
- The default setting is set at "Normal mode".

■ Characteristics of air volume and capacity

● Cooling

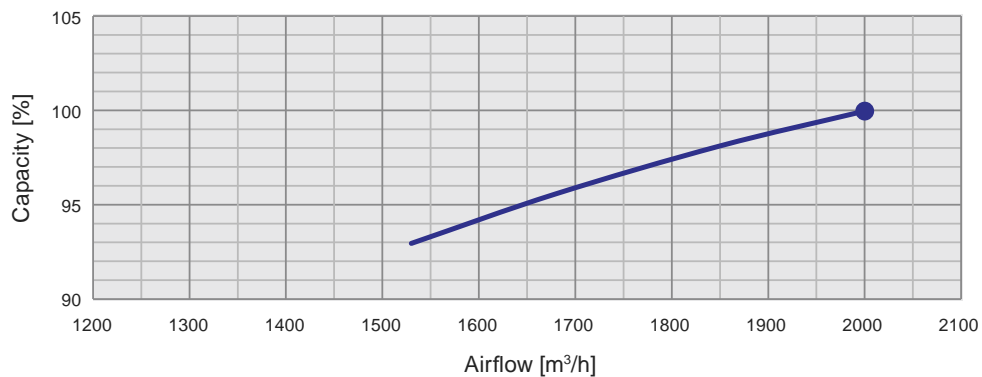


Model: ARGA45FMTA


Fan speed	Item		Static pressure mode							
			Mode 1		Mode 2		Mode 3		Mode 4	
			Low static pressure		Normal		High static pressure 1		High static pressure 2	
HIGH	Static pressure	Pa	30	45	60	75	90	110	110	120
	Airflow	m ³ /h	2500	2210	2500	2210	2380	2080	2100	1990
		l/s	694	614	694	614	661	578	583	553
		CFM	1471	1300	1471	1300	1400	1224	1235	1171
MED	Static pressure	Pa	27	39	50	68	76	94	94	99
	Airflow	m ³ /h	2340	2060	2380	2060	2200	1910	1910	1830
		l/s	650	572	661	572	611	531	531	508
		CFM	1376	1212	1400	1212	1294	1124	1124	1076
LOW	Static pressure	Pa	23	33	44	58	65	78	78	83
	Airflow	m ³ /h	2160	1910	2190	1900	2020	1740	1740	1670
		l/s	600	531	608	528	561	483	483	464
		CFM	1271	1124	1288	1118	1188	1024	1024	982
QUIET	Static pressure	Pa	18	28	36	48	48	58	62	66
	Airflow	m ³ /h	2000	1760	2000	1730	1730	1500	1550	1490
		l/s	556	489	556	481	481	417	431	414
		CFM	1176	1035	1176	1018	1018	882	912	876

Factory setting is Mode 2.

Fan performance curve_1

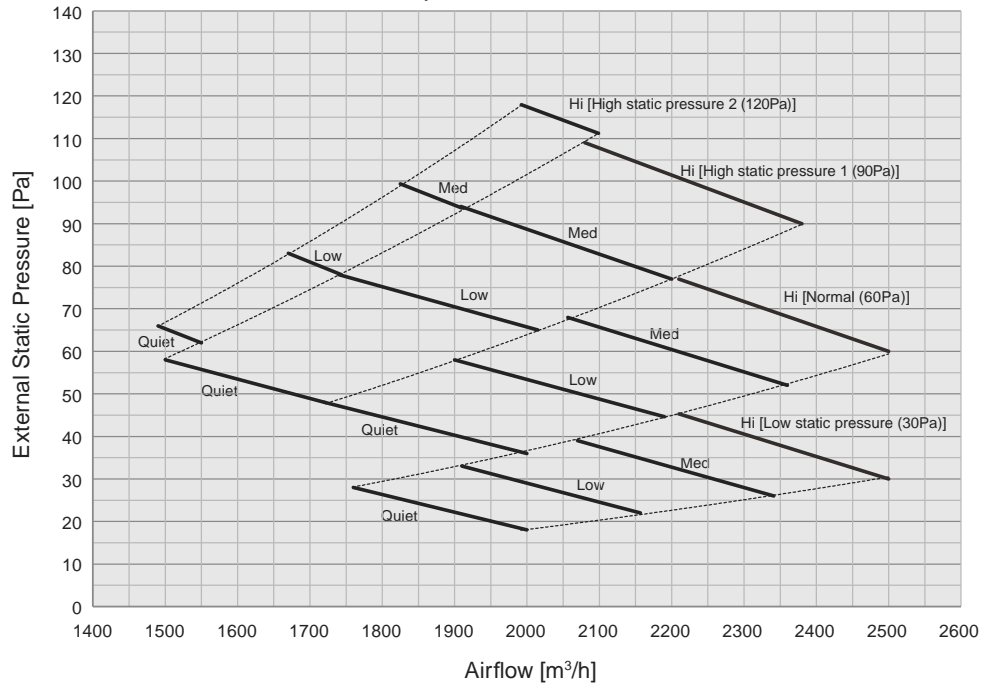

Fan performance curve_2
(For function setting by remote controller)

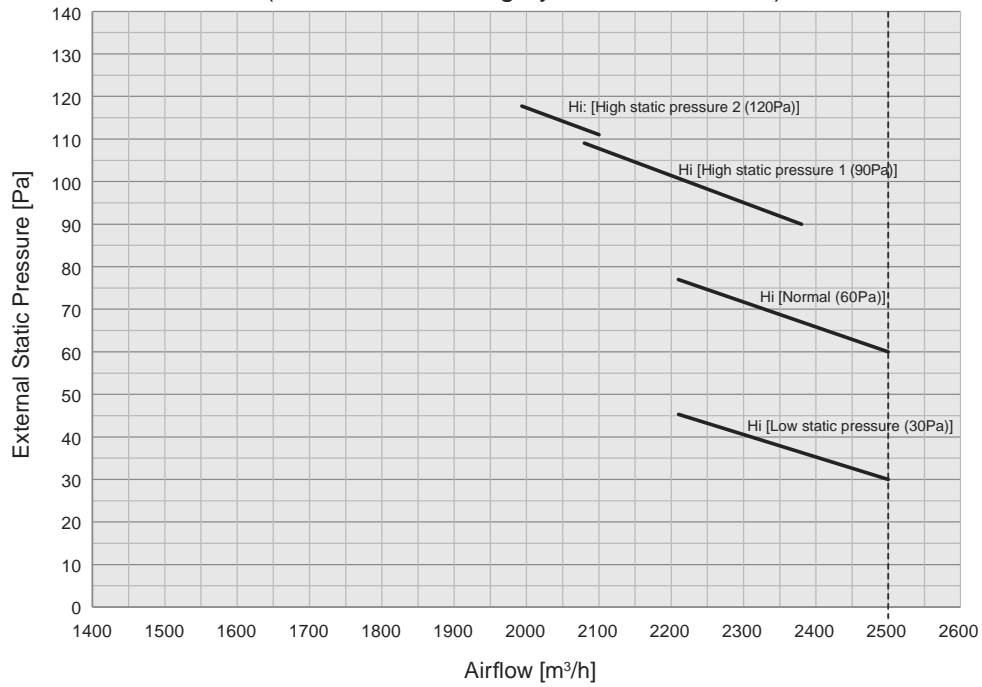


NOTES:

- Setting of the external static pressure is switchable into 4-stage modes by using the remote controller.
- According to the resistance of the connecting duct, perform the setting of the external static pressure with referring “Fan performance curve_2” above.
- The default setting is set at "Normal mode".

■ Characteristics of air volume and capacity

● Cooling

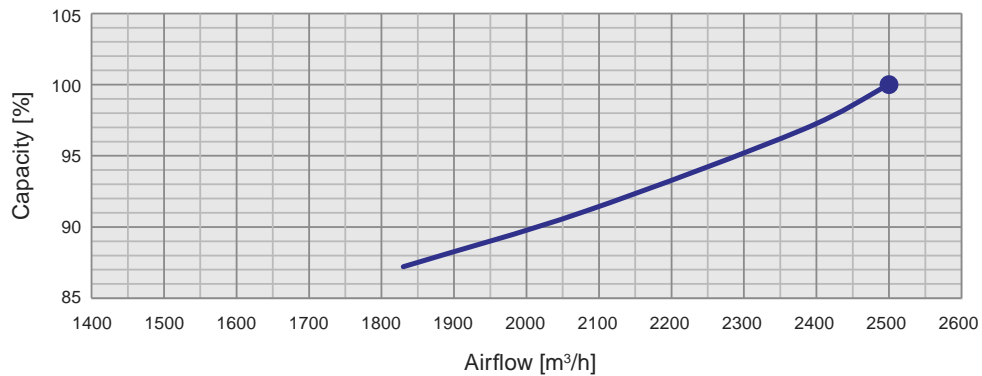


Model: ARGA60FHTA


Fan speed	Item		Static pressure mode							
			Mode 1		Mode 2		Mode 3		Mode 4	
			Normal		High static pressure 1		High static pressure 2		High static pressure 3	
HIGH	Static pressure	Pa	60	85	100	120	130	145	150	160
	Airflow	m ³ /h	3350	2860	3060	2780	2900	2700	2760	2620
		l/s	931	794	850	772	806	750	767	728
CFM		1971	1682	1800	1635	1706	1588	1624	1541	
MED	Static pressure	Pa	50	77	85	103	115	127	130	138
	Airflow	m ³ /h	3170	2700	2820	2580	2720	2530	2550	2430
		l/s	881	750	783	717	756	703	708	675
CFM		1865	1588	1659	1518	1600	1488	1500	1429	
LOW	Static pressure	Pa	45	70	67	86	97	110	115	123
	Airflow	m ³ /h	2950	2550	2580	2370	2520	2370	2410	2300
		l/s	819	708	717	658	700	658	669	639
CFM		1735	1500	1518	1394	1482	1394	1418	1353	
QUIET	Static pressure	Pa	37	55	57	67	85	96	95	101
	Airflow	m ³ /h	2650	2270	2370	2130	2340	2210	2190	2100
		l/s	736	631	658	592	650	614	608	583
CFM		1559	1335	1394	1253	1376	1300	1288	1235	

Factory setting is Mode 1.

Fan performance curve_1

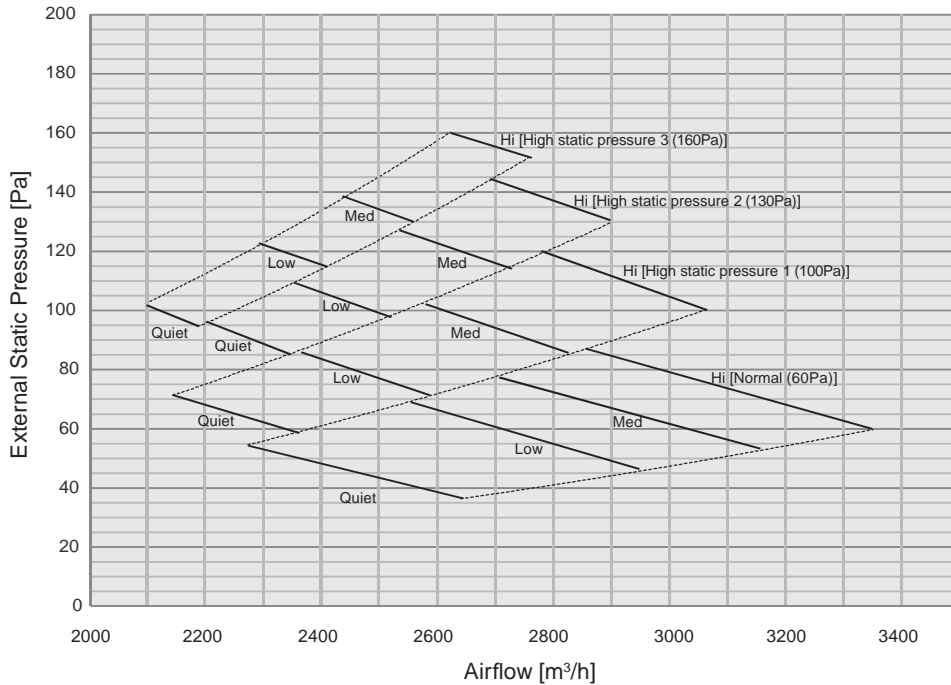

Fan performance curve_2
(For function setting of remote controller)

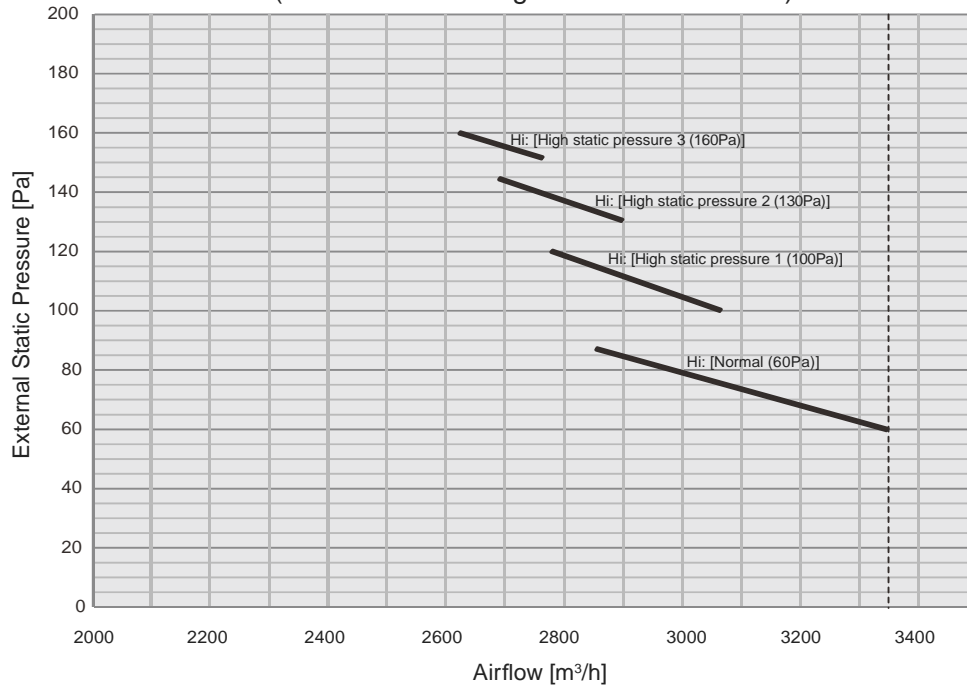


NOTES:

- Setting of the external static pressure is switchable into 4-stage modes by using the remote controller.
- According to the resistance of the connecting duct, perform the setting of the external static pressure with referring “Fan performance curve_2” above.
- The default setting is set at "Normal mode".

■ Characteristics of air volume and capacity

● Cooling

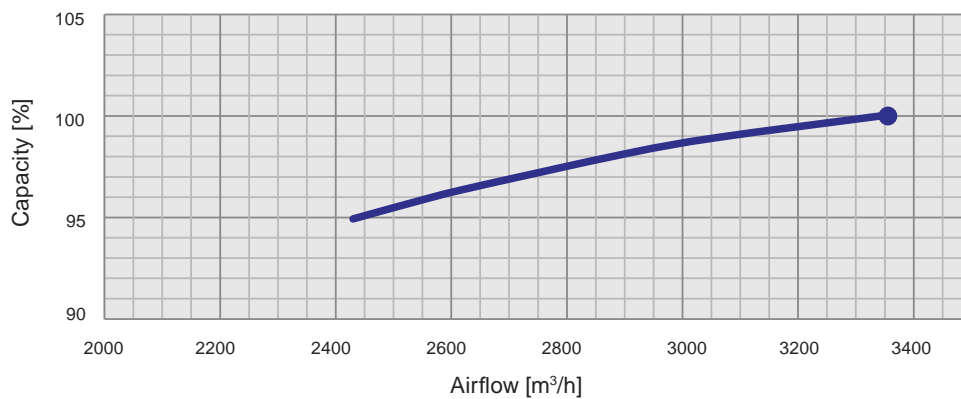


8. Operation noise (sound pressure)

8-1. Noise level curve


■ Model: ARGA30FMTA

● Cooling

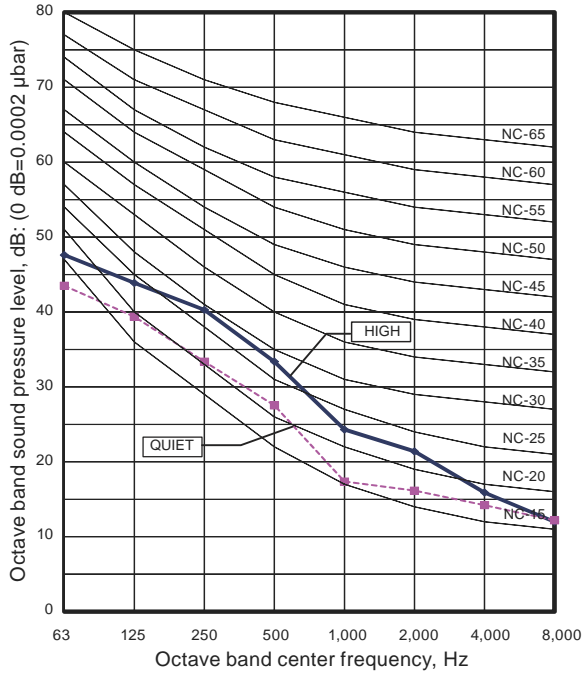


■ Model: ARGA36FMTA

● Cooling

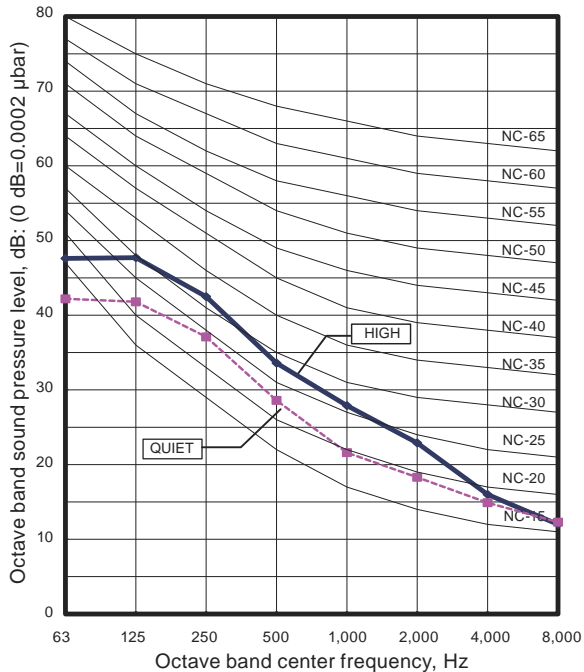


Model: ARGA45FMTA

● Cooling

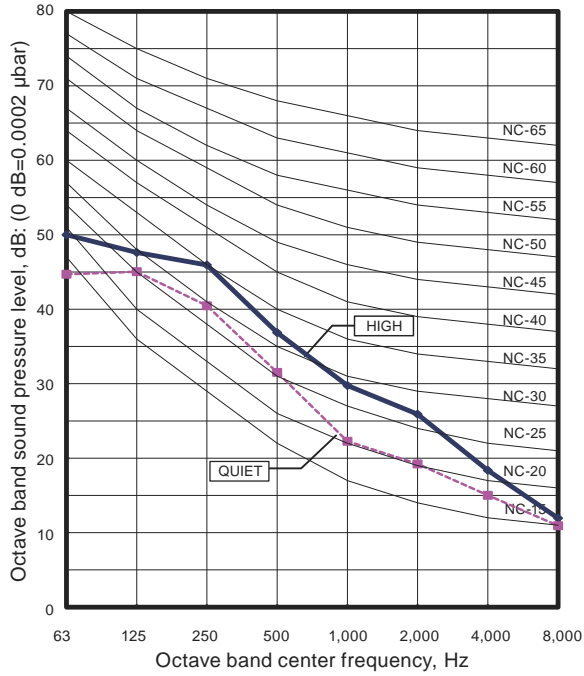


Model: ARGA60FHTA

● Cooling

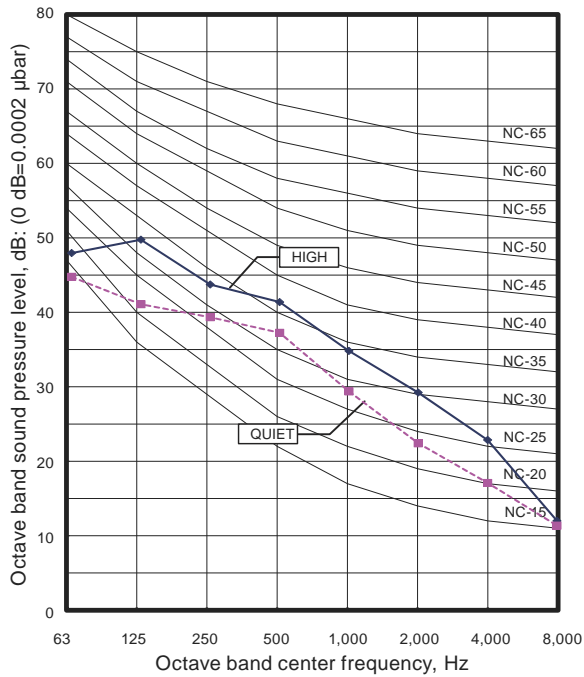

8-2. Sound level check point

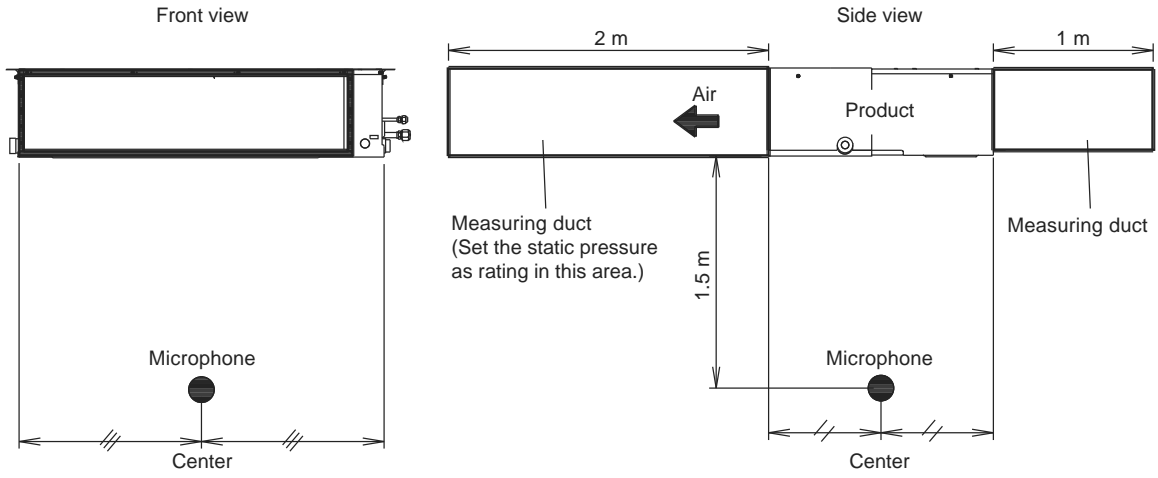

9. Safety devices

	Protection form		Model	
			ARGA30FMTA ARGA36FMTA ARGA45FMTA	ARGA60FHTA
Circuit protection	Current fuse (PCB*)		250 V, 5 A	
Fan motor protection	Thermal protection program	Activate	115 ± 15 °C Fan motor stop	—
		Reset	70 °C Fan motor restart	—
	Current protection	Activate	—	7.9 A Fan motor stop

*: Printed Circuit Board

10. External input and output

With using external input and output functions, this product can be operated inter-connectedly with an external device.

■ Models: ARGA30FMTA, ARGA36FMTA, and ARGA45FMTA

Connector	Input	Output	Remarks
CN102	Control input	—	See external input/output settings for details.
CN103	—	Operation status output	
CN6	—	Fresh-air control output	

■ Model: ARGA60FHTA

Connector	Input	Output	Remarks
CN46	Control input	—	See external input/output settings for details.
* CN47	—	Operation status output	
	—	Error status output	
	—	Fresh-air control output	

*: Any one of the output functions can be selected by function setting No.60.


10-1. Control input (Operation/Stop or Forced stop)

The air conditioner can be remotely operated by means of the following on-site work.

"Operation/Stop" mode or "Forced stop" mode can be selected with function setting of indoor unit. Unit operation is started at the following contents by adding the contact input of a commercial on/off switch to a connector on the external control PCB and turning it on.


Unit operation	Initial setting after power is on	Starting mode other than initial setting
Operation mode	Auto changeover	Mode at previous operation
Set temperature	24 °C	Temperature at previous operation
Airflow mode	AUTO	Mode at previous operation
Air direction (swing)	Standard air direction (swing OFF)	Air direction at previous operation

● Circuit diagram example

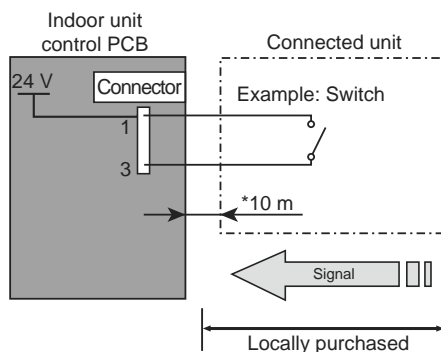


- Contact capacity: DC 24 V or more, 10 mA or more.
- *: Make the distance from the PCB to the connected unit within 10 m.
- Use non-polar relays and switches.


- When function setting is in "Operation/Stop" mode

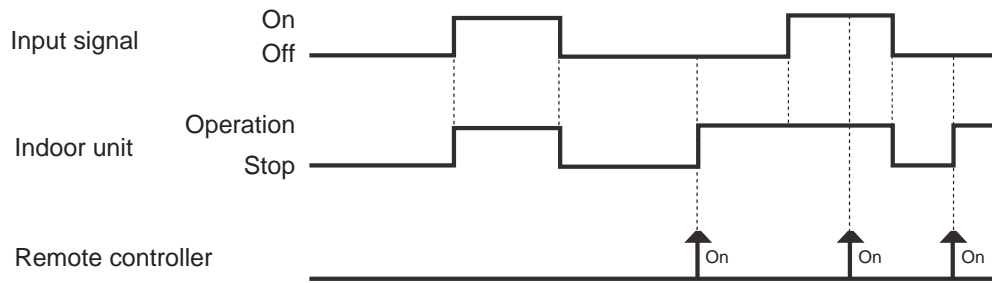

- When function setting is in "Forced stop" mode

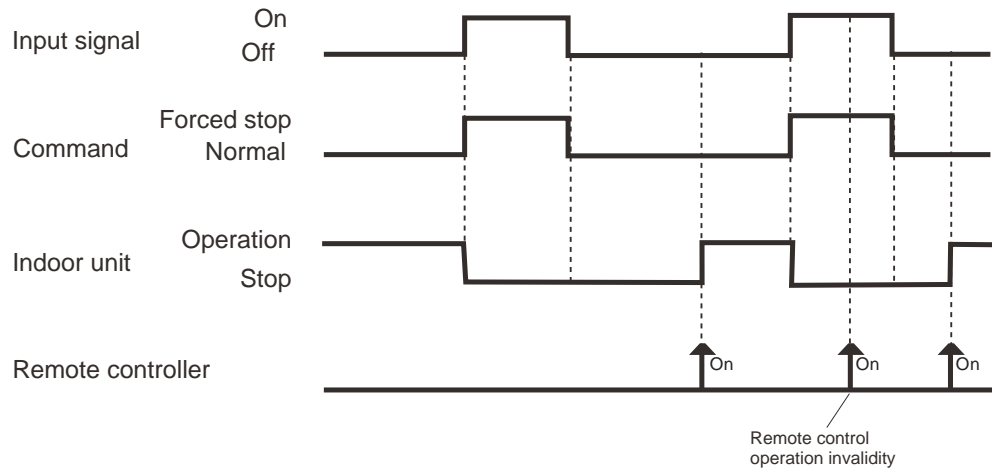

● **Optional part**


Model name	Exterior
UTD-ECS5A	External input wire 

10-2. External output


With using external output function, operating status of this product can be transmitted to the external device, and also, this product can be inter-connected with the external device.

■ Operation status output

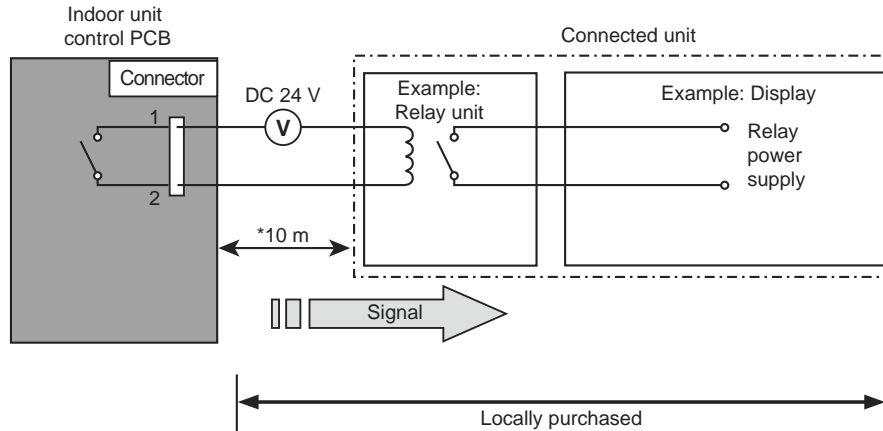

● Circuit diagram example

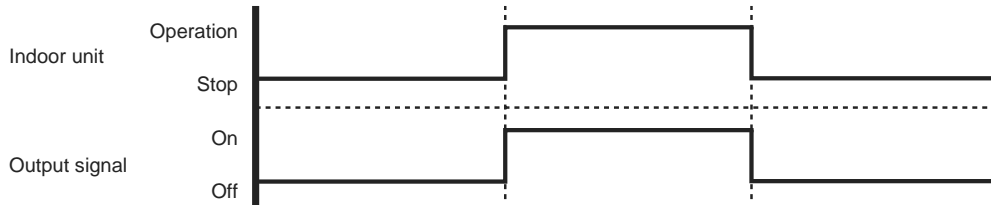

- *: Make the distance from the PCB to the connected unit within 10 m.
- Relay spec: Max. DC 24 V, 10 mA to less than 500 mA.




● Optional part


Model name	Exterior
UTD-ECS5A	External output wire For 30,36,45 models 
	For 60 model 

■ Error status output

● Circuit diagram example

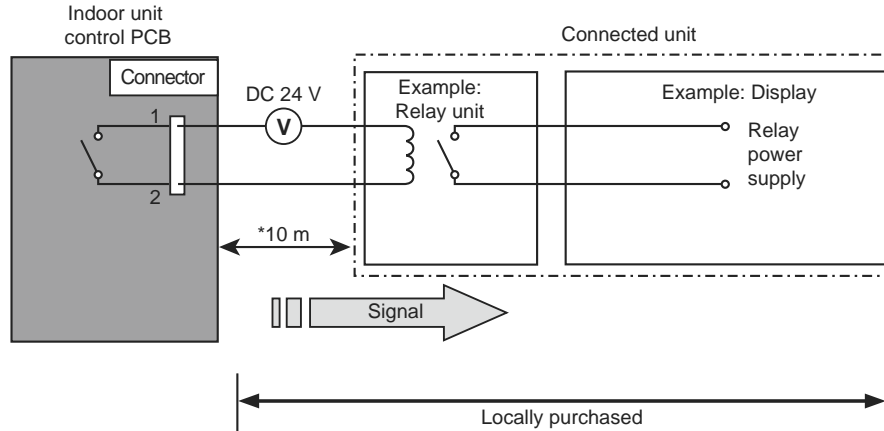

*: Make the distance from the PCB to the connected unit within 10 m.
Relay spec: Max. DC 24 V, 10 mA to less than 500 mA.

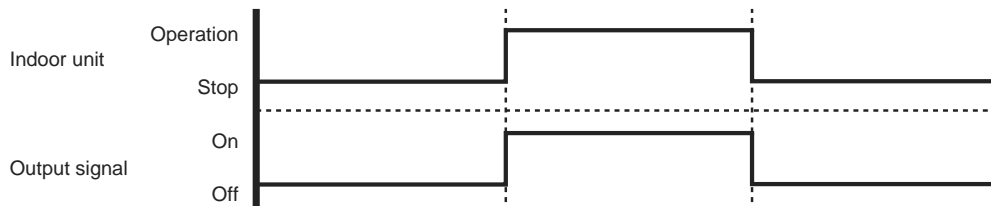

● Optional part


Model name	Exterior
UTD-ECS5A	External output wire

■ Fresh-air control output


Signal linked to the indoor unit fan on can be output.

NOTE: In cold-air prevention control operation, the signal becomes off.


● Circuit diagram example

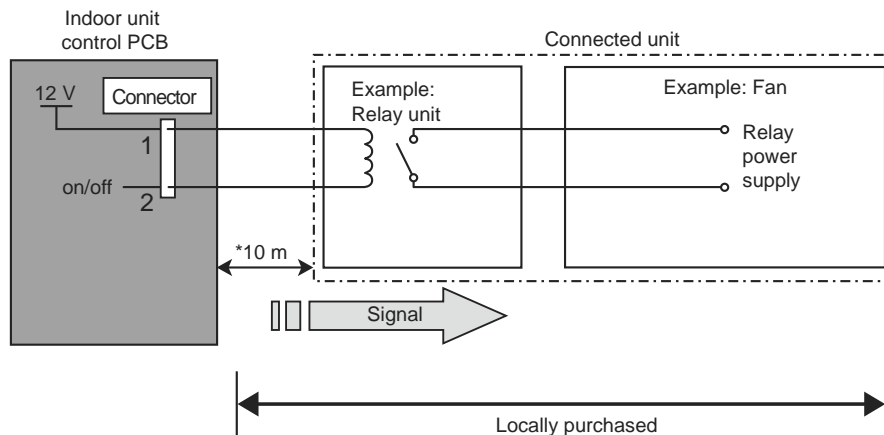

- *: Make the distance from the PCB to the connected unit within 10 m.
- Relay spec: Rated DC 12 V, 50 mA or less.

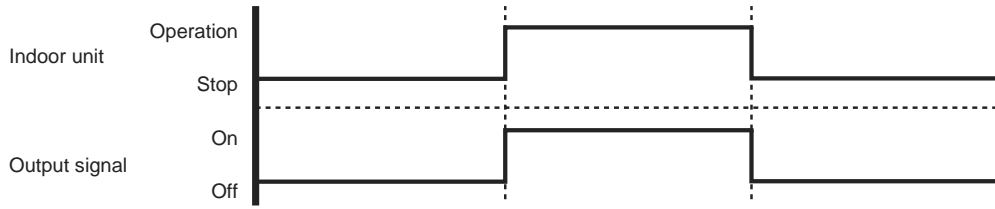

● **Optional part**

Model name	Exterior
UTD-ECS5A	 <p>Fresh-air output wire</p>

11. Function settings

To adjust the functions of this product according to the installation environment, various types of function settings are available.

NOTE: Incorrect settings can cause a product malfunction.

11-1. Function settings on indoor unit

By using some components on the PCB, you can change the function settings.

■ Models: ARGA30FMTA, ARGA36FMTA, and ARGA45FMTA


By using some components on the PCB, you can change the function settings.

Related components on the PCB and the applicable settings

Component		Setting content
DIP switch	1	Remote controller address setting
	2	
	3	
	4	
Jumper wire	JM1	Setting change prohibited
	JM2	Setting change prohibited
	JM3	Setting change prohibited

● Component location

Components on the indoor unit main PCB used for the function settings are located as shown in the following figure.

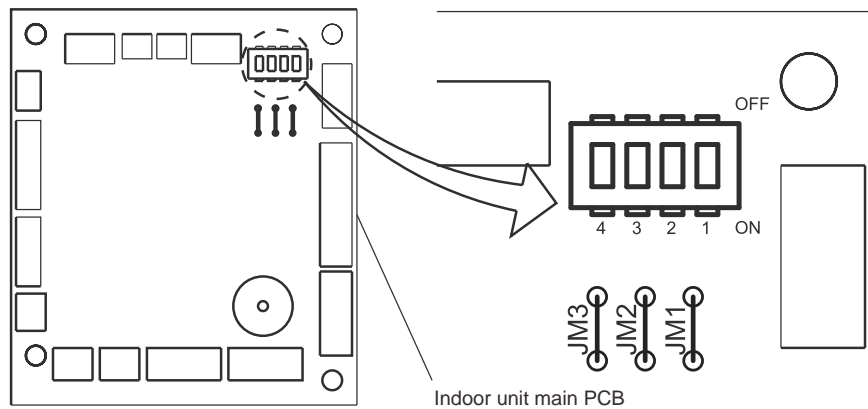


● DIP switch setting

Remote controller address setting

When operating a number of indoor units by using a wired remote controller, DIP switch setting for assigning unit number to each indoor unit is required.
DIP switches are normally set to make the unit number 00.

Remote controller address	DIP switch number				Factory setting
	1	2	3	4	
00	OFF	OFF	OFF	OFF	◆
01	ON	OFF	OFF	OFF	
02	OFF	ON	OFF	OFF	
03	ON	ON	OFF	OFF	
04	OFF	OFF	ON	OFF	
05	ON	OFF	ON	OFF	
06	OFF	ON	ON	OFF	
07	ON	ON	ON	OFF	
08	OFF	OFF	OFF	ON	
09	ON	OFF	OFF	ON	
10	OFF	ON	OFF	ON	
11	ON	ON	OFF	ON	
12	OFF	OFF	ON	ON	
13	ON	OFF	ON	ON	
14	OFF	ON	ON	ON	
15	ON	ON	ON	ON	

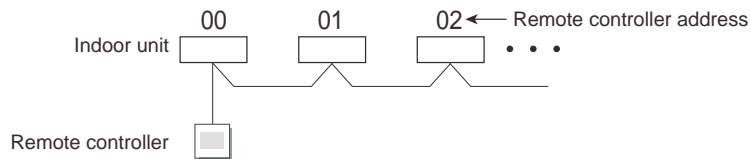

● Jumper wire setting

- JM1: Setting change prohibited
- JM2: Setting change prohibited
- JM3: Setting change prohibited


■ Model: ARGA60FHTA

By using some components on the PCB, you can change the function settings.

Related components on the PCB and the applicable settings

● Component location

Components on the indoor unit main PCB used for the function settings are located as shown in the following figure.

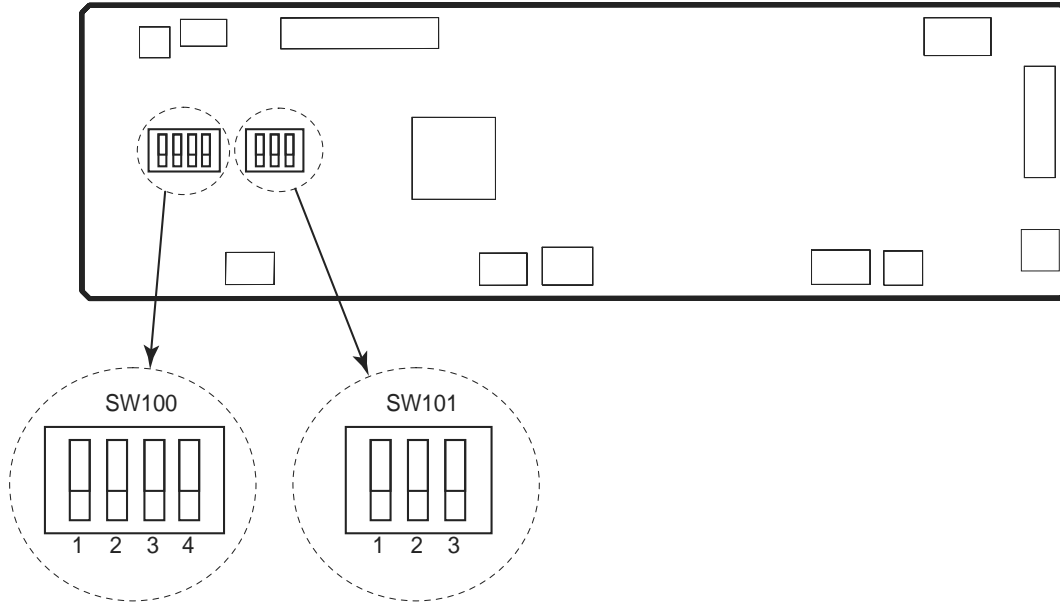


● DIP switch setting

- Remote controller address setting (SW100)

When operating a number of indoor units by using a wired remote controller, DIP switch setting for assigning unit number to each indoor unit is required.

DIP switches are normally set to make the unit number 00.

Remote controller address	DIP switch number				Factory setting
	1	2	3	4	
00	OFF	OFF	OFF	OFF	◆
01	ON	OFF	OFF	OFF	
02	OFF	ON	OFF	OFF	
03	ON	ON	OFF	OFF	
04	OFF	OFF	ON	OFF	
05	ON	OFF	ON	OFF	
06	OFF	ON	ON	OFF	
07	ON	ON	ON	OFF	
08	OFF	OFF	OFF	ON	
09	ON	OFF	OFF	ON	
10	OFF	ON	OFF	ON	
11	ON	ON	OFF	ON	
12	OFF	OFF	ON	ON	
13	ON	OFF	ON	ON	
14	OFF	ON	ON	ON	
15	ON	ON	ON	ON	

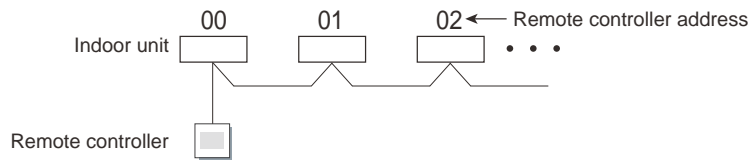

- **Switch 1: Setting change prohibited (SW101)**
- **Switch 2: Setting change prohibited (SW101)**
- **Switch 3: Setting change prohibited (SW101)**

11-2. Function settings by using remote controller

Some function settings can be changed on the remote controller. After confirming the setting procedure and the content of each function setting, select appropriate functions for your installation environment.

NOTE: Incorrect settings can cause a product malfunction.

■ Setting procedure by using wired remote controller

The function number and the associated setting value are displayed on the LCD of the remote controller. Follow the instructions written in the local setup procedure supplied with the remote controller, and select appropriate setting according to the installation environment.


Before turning on the power of the indoor unit, reconfirm following items:

- Piping air tight test and vacuuming have been performed firmly.
- There is no wiring mistake.

1. Turn on the power.
2. Press the SET TEMP. buttons (▼) (▲) and FAN button simultaneously for more than 5 seconds to enter the function setting mode.




3. Press the SET BACK button to select the indoor unit number when you set the remote controller address setting.

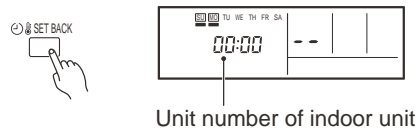

4. Press the set time buttons to select the function number.



5. Press the SET TEMP. buttons (▼) (▲) to select the setting value. The display flashes during setting value selection.

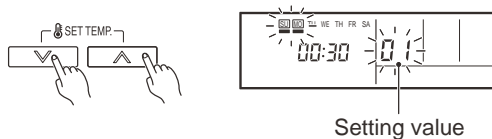

6. Press the TIMER SET button to confirm the setting. Press the TIMER SET button for a few seconds until the setting value stops flashing. If the setting value display changes or if "--" is displayed when the flashing stops, the setting value has not been set correctly. (An invalid setting value may have been selected for the indoor unit.)

7. Repeat steps 3 to 6 to perform additional settings. Press the SET TEMP. buttons (▼) (▲) and FAN button simultaneously again for more than 5 seconds to cancel the function setting mode. In addition, the function setting mode will be automatically canceled after 1 minute if no operation is performed.
8. After completing the function setting, be sure to turn off the power and turn it on again.

⚠ CAUTION

After turning off the power, wait 30 seconds or more before turning on the power again. The function setting will not become active unless the power is turned off then on again.

■ Contents of function setting

Each function setting listed in this section is adjustable in accordance with the installation environment.

NOTE: Setting will not be changed if invalid numbers or setting values are selected.

	Function no.	Functions
1)	11	Filter sign
2)	21	Static pressure
3)	30	Room temperature sensor control for cooling
4)	40	Auto restart
5)	42	Room temperature sensor switching
6)	46	External input control
7)	48	Room temperature sensor switching (Aux.)
8)	60	Switching functions for external output terminal

1) Filter sign

Select appropriate intervals for displaying the filter sign on the indoor unit according to the estimated amount of dust in the air of the room.

If the indication is not required, select "No indication" (03).

Function number	Setting value	Setting description	Factory setting
11	00	Standard (2,500 hours)	
	01	Long interval (4,400 hours)	
	02	Short interval (1,250 hours)	
	03	No indication	◆

2) Static pressure

Select the appropriate static pressure according to the installation conditions.

For 30 model

Function number	Setting value	Setting description	Factory setting
21	00	Normal (30 Pa)	◆
	01	High static pressure 1 (60 Pa)	
	02	High static pressure 2 (90 Pa)	
	03	High static pressure 3 (120 Pa)	

For 36, 45 model

Function number	Setting value	Setting description	Factory setting
21	00	Normal (60 Pa)	◆
	01	Low static pressure (30 Pa)	
	02	High static pressure 1 (90 Pa)	
	03	High static pressure 2 (120 Pa)	

For 60 model

Function number	Setting value	Setting description	Factory setting
21	00	Normal (60 Pa)	◆
	02	High static pressure 1 (100 Pa)	
	03	High static pressure 2 (130 Pa)	
	04	High static pressure 3 (160 Pa)	

3) Room temperature sensor control for cooling

Depending on the installed environment, correction of the room temperature sensor may be required. Select the appropriate control setting according to the installed environment.

Function number	Setting value	Setting description	Factory setting
30	00	Standard	◆
	01	Lower control	
	02	Slightly higher control	
	03	Higher control	

4) Auto restart

Enables or disables automatic restart after a power interruption.

Function number	Setting value	Setting description	Factory setting
40	00	Enable	◆
	01	Disable	

NOTE: Auto restart is an emergency function such as for power outage etc. Do not attempt to use this function in normal operation. Be sure to operate the unit by remote controller or external device.

5) Room temperature sensor switching

(Only for wired remote controller)

When using the wired remote controller temperature sensor, change the setting to "Both" (01).

Function number	Setting value	Setting description	Factory setting
42	00	Indoor unit	◆
	01	Both	

00: Sensor on the indoor unit is active.

01: Sensors on both indoor unit and wired remote controller are active.

NOTE: Remote controller sensor must be turned on by using the remote controller.

6) External input control

"Operation/Stop" mode or "Forced stop" mode can be selected.

Function number	Setting value	Setting description	Factory setting
46	00	Operation/Stop mode	◆
	01	(Setting prohibited)	
	02	Forced stop mode	

7) Room temperature sensor switching (Aux.)

To use the temperature sensor on the wired remote controller only, change the setting to "Wired remote controller" (01).

This function will only work if the function setting 42 is set at "Both" (01).

Function number	Setting value	Setting description	Factory setting
48	00	Both	◆
	01	Wired remote controller	

8) Switching functions for external output terminal

Functions of the external output terminal can be switched. For details, refer to “External input and output”.

Only for 60 model

Function number	Setting value	Setting description	Factory setting
60	00	Operation status	◆
	09	Error status	
	10	Indoor unit fan operation status	


11-3. Function settings on wired remote controller

By using some components on the wired remote controller, you can change the function settings related on the remote controller.

■ Component location

Components on the wired remote controller used for the function settings are located as shown in the following figure.

NOTE: Do not use DIP switch 2.

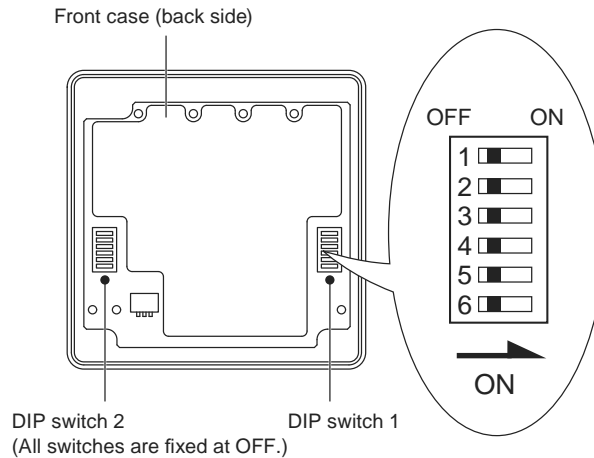

■ DIP switch setting

By switching each slide switch on the DIP switch 1, you can change the function settings for the remote controller.

DIP switch 1	SW1	Setting change prohibited*
	SW2	Setting change prohibited*
	SW3	Setting change prohibited*
	SW4	Setting change prohibited*
	SW5	Setting change prohibited*
	SW6	Memory backup setting

*: Switches are fixed at OFF initially.

- **SW6: Memory backup setting**

Set to ON to use the batteries for memory backup. If the batteries are not used, all of the settings stored in the memory will be deleted if there is power failure.

NOTE: In case of simple remote controller, do not turn it on.

SW6	Memory backup	Factory setting
OFF	Disabled	◆
ON	Enabled	

12. Optional parts

12-1. Others

Exterior	Part name	Model name	Summary
	External control set	UTD-ECS5A	Use to connect with various peripheral devices and air conditioner PCB. (Set of 6)
	Remote sensor unit	UTY-XSZX	New amenity space can be offered by installing Remote sensor unit in the remote controller.
	Long-life filter	UTD-LFNB	Long-life filter can be mounted to the indoor unit. (For 30 model)
	Long-life filter	UTD-LFNA	Long-life filter can be mounted to the indoor unit. (For 36 and 45 models)
	Long-life filter	UTD-LFKA	Long-life filter can be mounted to the indoor unit. (For 60 model)
	Drain pump unit	UTZ-PX1NAA	Optional drain lift up mechanism allows more flexible installation.

Part 2. OUTDOOR UNIT

SINGLE TYPE:

AOGA30FBTAS

AOGA36FRTAS

AOGA45FRTAS

AOGA60FRTAS

1. Specifications

Type			Cooling only	
Model name			AOGA30FBTAS	
Power supply			220—240 V ~ 50 Hz	
Available voltage range			198—264 V	
Starting current			60	
Fan	Airflow rate	Cooling	m ³ /h	4400—4400
	Type × Q'ty			Propeller × 1
	Motor output		W	95
Sound pressure level *1		Cooling	dB(A)	56—57
Heat exchanger type	Dimensions (H × W × D)		mm	main: 882 × 955 × 36.4sub: 882 × 570 × 18.2
	Fin pitch			1.45
	Rows × Stages			main: 2 × 42sub: 1 × 42
	Pipe type			Copper
	Fin		Type (Material)	Corrugate (Aluminum)
		Surface treatment	Corrosion resistance (Blue fin)	
Compressor	Type × Q'ty			Scroll × 1
	Motor output		W	1950
Refrigerant	Type			R410A
	Factory charge		g	2500
Refrigerant oil	Type			POE
	Amount		cm ³	858
Enclosure	Material			Steel
	Color			Beige Approximate color of MUNSELL 10YR7.5/1.0
Dimensions (H × W × D)	Net		mm	914 × 970 × 370
	Gross			1048 × 1064 × 479
Weight	Net		kg	77
	Gross			85
Connection pipe	Size	Liquid	mm (in)	Ø 9.52 (Ø 3/8)
		Gas		Ø 15.88 (Ø 5/8)
	Method			Flare
	Pre-charge length		m	7.5
	Max. length			30
Max. height difference		15		
Operation range		Cooling	°C	21 to 52
NOTES: <ul style="list-style-type: none"> • Specifications are based on the following conditions: <ul style="list-style-type: none"> – Cooling: Indoor temperature of 27 °CDB/19 °CWB, and outdoor temperature of 35 °CDB/24 °CWB. – Pipe length: 7.5 m, Height difference: 0 m. • Protective function might work when using it outside the operation range. • *1: Sound pressure level <ul style="list-style-type: none"> – Measured values in manufacturer's anechoic chamber. – Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here. 				


OUTDOOR UNIT
AOGA30-60F

Type			Cooling only		
Model name			AOGA36FRTAS	AOGA45FRTAS	AOGA60FRTAS
Power supply			3N 380—415 V ~ 50 Hz		
Available voltage range			342—457 V		
Starting current			A	43	47
Fan	Airflow rate	Cooling	m ³ /h		
	Type x Q'ty	5700—6100			
	Motor output	W			
Sound pressure level *1			dB(A)		
Heat exchanger type	Dimensions (H x W x D)		1260 x 900 x 36.4		1260 x 900 x 39.9
	Fin pitch		mm		
	Rows x Stages		2 x 60		3 x 60
	Pipe type		Copper		
	Fin	Type (Material)	Corrugate (Aluminum)		Flat (Aluminum)
		Surface treatment	Corrosion resistance (Blue fin)		
Compressor	Type x Q'ty	Scroll x 1			
	Motor output	W		2440	3190
Refrigerant	Type	R410A			
	Factory charge	g		3400	4300
Refrigerant oil	Type	POE			
	Amount	cm ³		1242	
Enclosure	Material		Steel		
	Color		Beige Approximate color of MUNSELL 10YR7.5/1.0		
Dimensions (H x W x D)	Net		mm		
	Gross		1290 x 900 x 330		
Weight	Net		kg		
	Gross		100	102	107
Connection pipe	Size	Liquid	mm (in)		
		Gas	Ø 9.52 (Ø 3/8)		
	Method		Flare		
	Pre-charge length		m		
	Max. length		20		
	Max. height difference		50		
Operation range			Cooling	°C	
21 to 52					
NOTES: <ul style="list-style-type: none"> Specifications are based on the following conditions: <ul style="list-style-type: none"> Cooling: Indoor temperature of 27 °CDB/19 °CWB, and outdoor temperature of 35 °CDB/24 °CWB. Pipe length: 7.5 m, Height difference: 0 m. Protective function might work when using it outside the operation range. *1: Sound pressure level <ul style="list-style-type: none"> Measured values in manufacturer's anechoic chamber. Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here. 					


2. Dimensions

2-1. Model: AOGA30FBTAS

Unit : mm

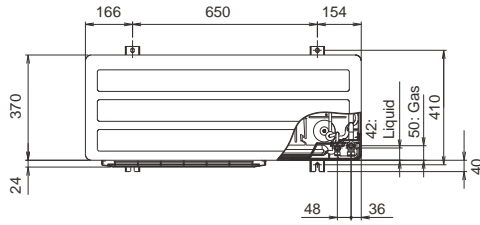


Top view

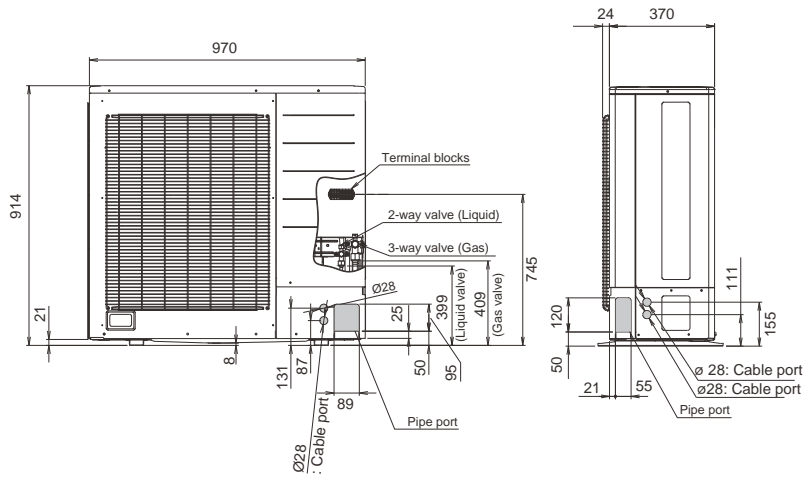


Front view

Side view

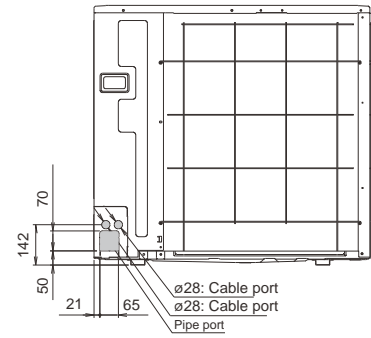

Rear view

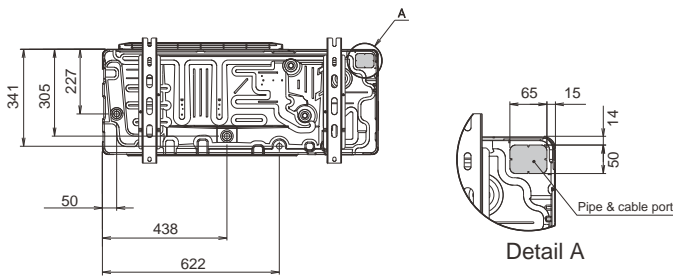


Bottom view

OUTDOOR UNIT
AOGA30-60F


2-2. Models: AOGA36FRTAS, AOGA45FRTAS, and AOGA60-FRTAS

OUTDOOR UNIT
AOGA30-60F


Unit : mm

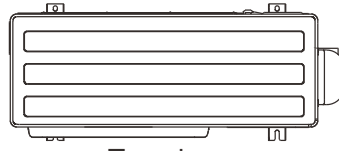


Top view

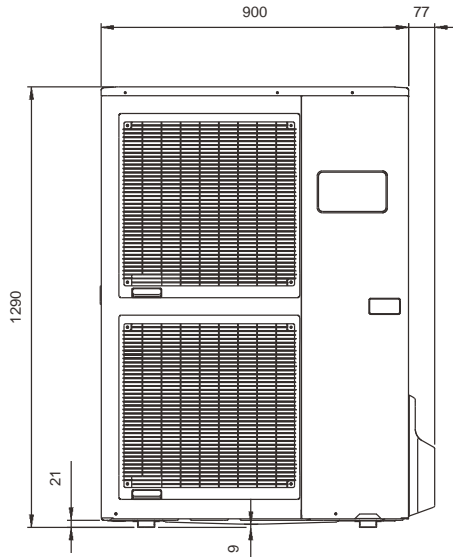


Front view

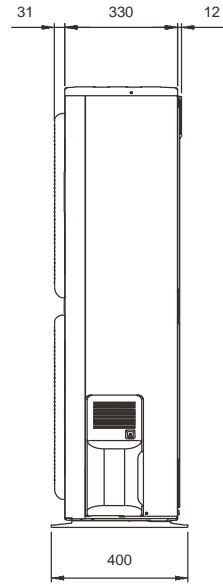

Side view

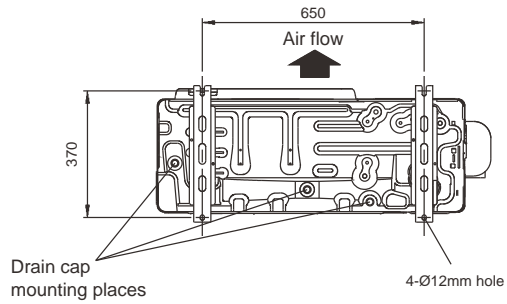

Bottom view

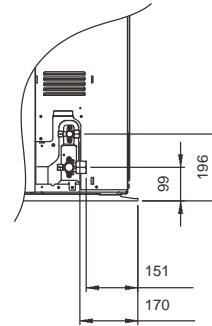

2-3. Installation space requirement

Provide sufficient installation space for product safety.


■ Model: AOGA30FBTAS

● Single outdoor unit installation


- When the upper space is open:

Unit: mm


When there are obstacles at the rear only.

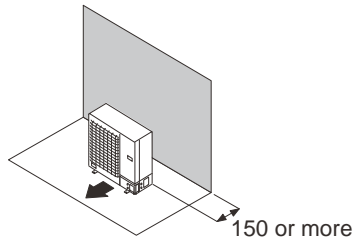


When there are obstacles at the rear and sides.

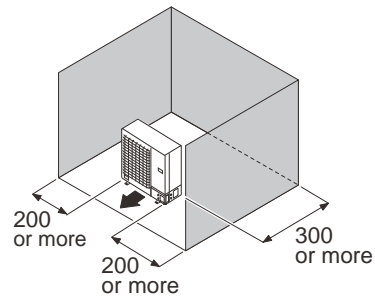

When there are obstacles at the front only.

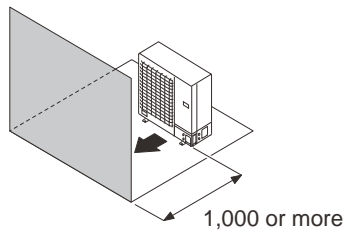


When there are obstacles at the front and rear.

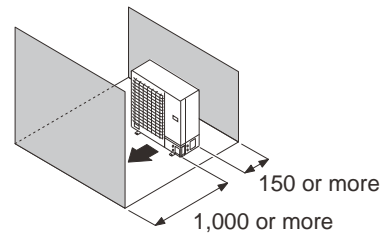


- When there is an obstruction in the upper space:

Unit: mm

When there are obstacles at the rear and above.

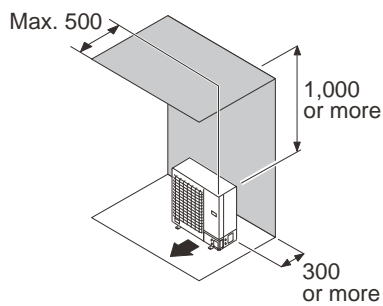

When there are obstacles at the rear, sides, and above.

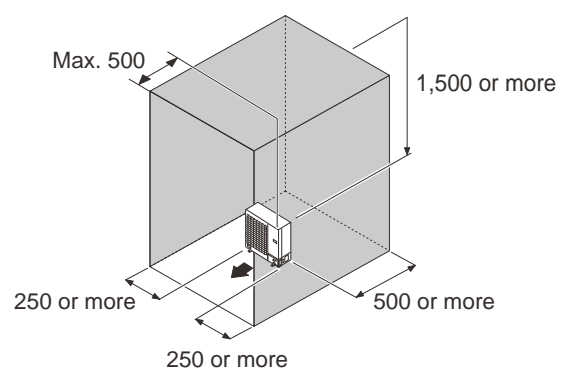


● Multiple outdoor unit installation


- When the upper space is open:

Unit: mm


When there are obstacles at the rear only.

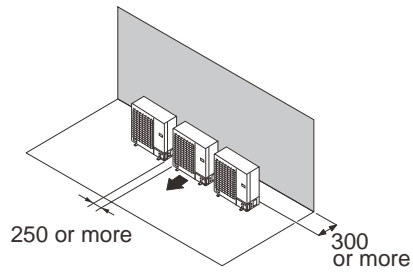

When there are obstacles at the front only.

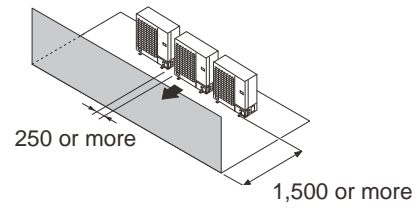


When there are obstacles at the front and rear.

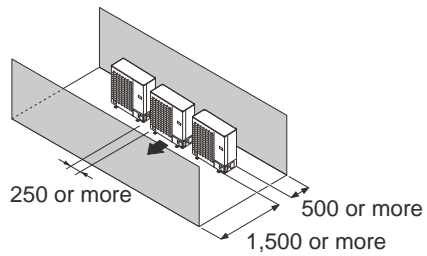

- When there is an obstruction in the upper space:

Unit: mm


When there are obstacles at the rear and above.

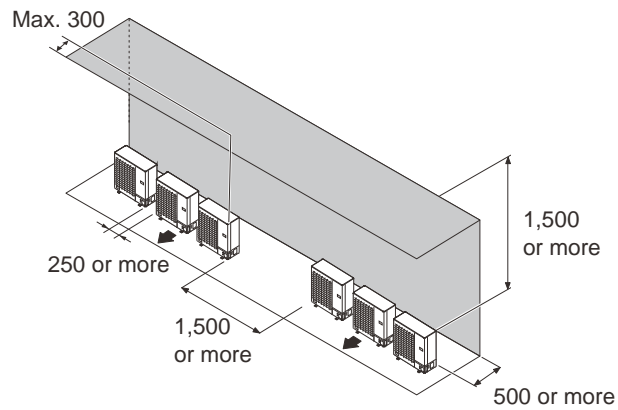



● Outdoor unit installation in multi-row

Unit: mm

Single parallel unit arrangement

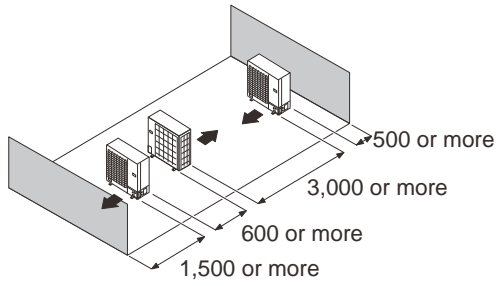

Multiple parallel unit arrangement

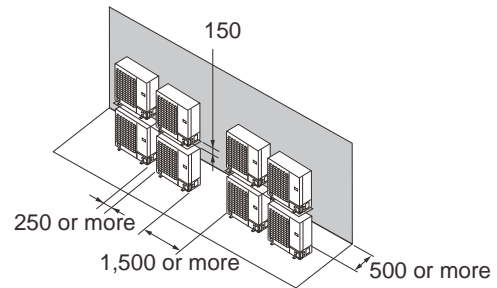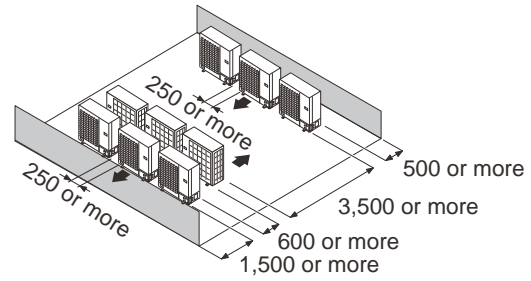

NOTES:

- If the space is larger than stated above, the condition will be the same as when there is no obstacle.
- Height above the floor level should be 50 mm or more.
- When installing the outdoor unit, be sure to open the front and left side to obtain better operation efficiency.

OUTDOOR UNIT
AOGA30-60F

Models: AOGA36FRTAS, AOGA45FRTAS, and AOGA60FRTAS


OUTDOOR UNIT
AOGA30-60F

● Single outdoor unit installation


- When the upper space is open:

Unit: mm


When there are obstacles at the rear only.

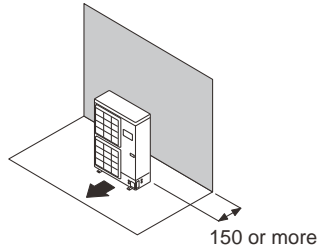


When there are obstacles at the rear and sides.

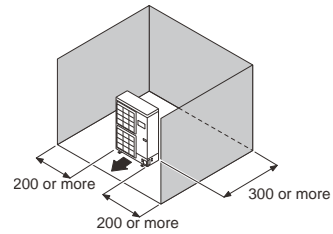

When there are obstacles at the front only.

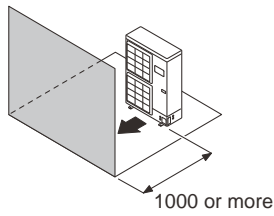


When there are obstacles at the front and rear.

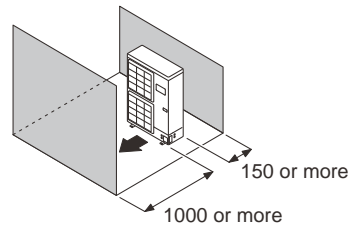


- When there is an obstruction in the upper space:

Unit: mm

When there are obstacles at the rear and above.

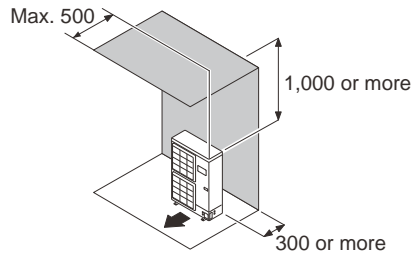

When there are obstacles at the rear, sides, and above.

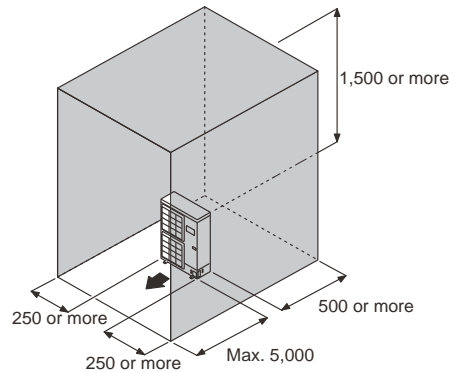


● Multiple outdoor unit installation


- When the upper space is open:

Unit: mm


When there are obstacles at the rear only.

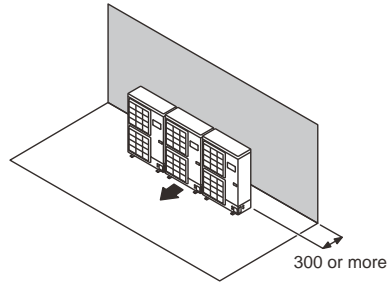

When there are obstacles at the front only.

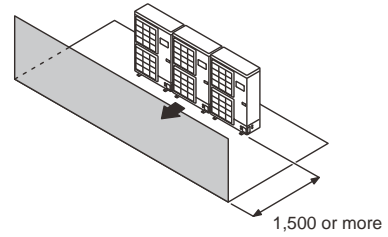


When there are obstacles at the front and rear.

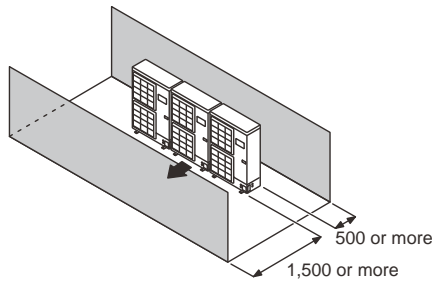

- When there is an obstruction in the upper space:

Unit: mm

When there are obstacles at the rear and above.

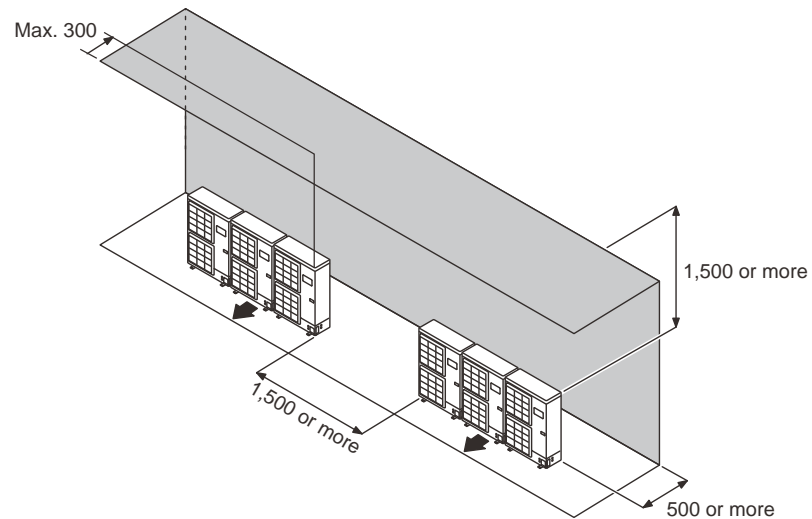


OUTDOOR UNIT
AOGA30-60F

● Outdoor unit installation in multi-row



Unit: mm

OUTDOOR UNIT
AOGA30-60F

Single parallel unit arrangement

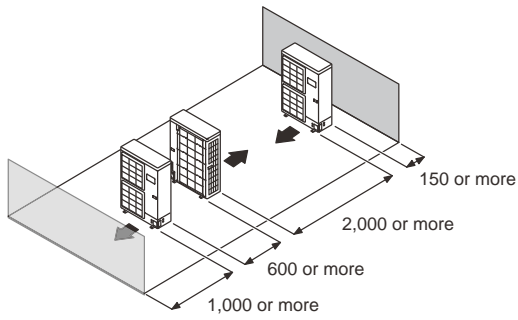

Multiple parallel unit arrangement

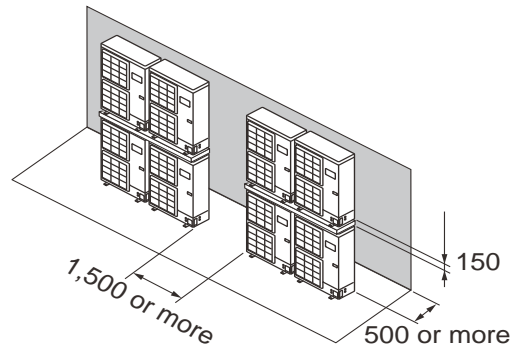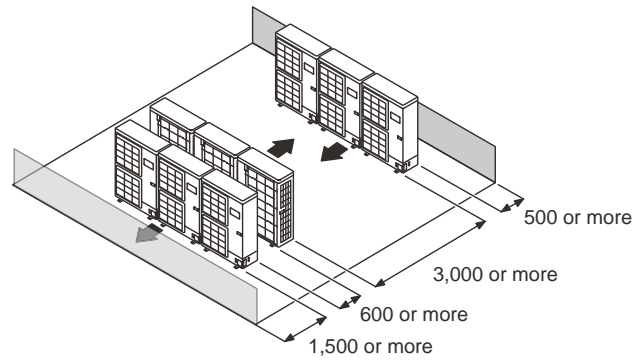


NOTES:

- If the space is larger than stated above, the condition will be the same as when there is no obstacle.
- Height above the floor level should be 50 mm or more.
- When installing the outdoor unit, be sure to open the front and left side to obtain better operation efficiency.

3. Refrigerant circuit

3-1. Model: AOGA30FBTAS

OUTDOOR UNIT
AOGA30-60F

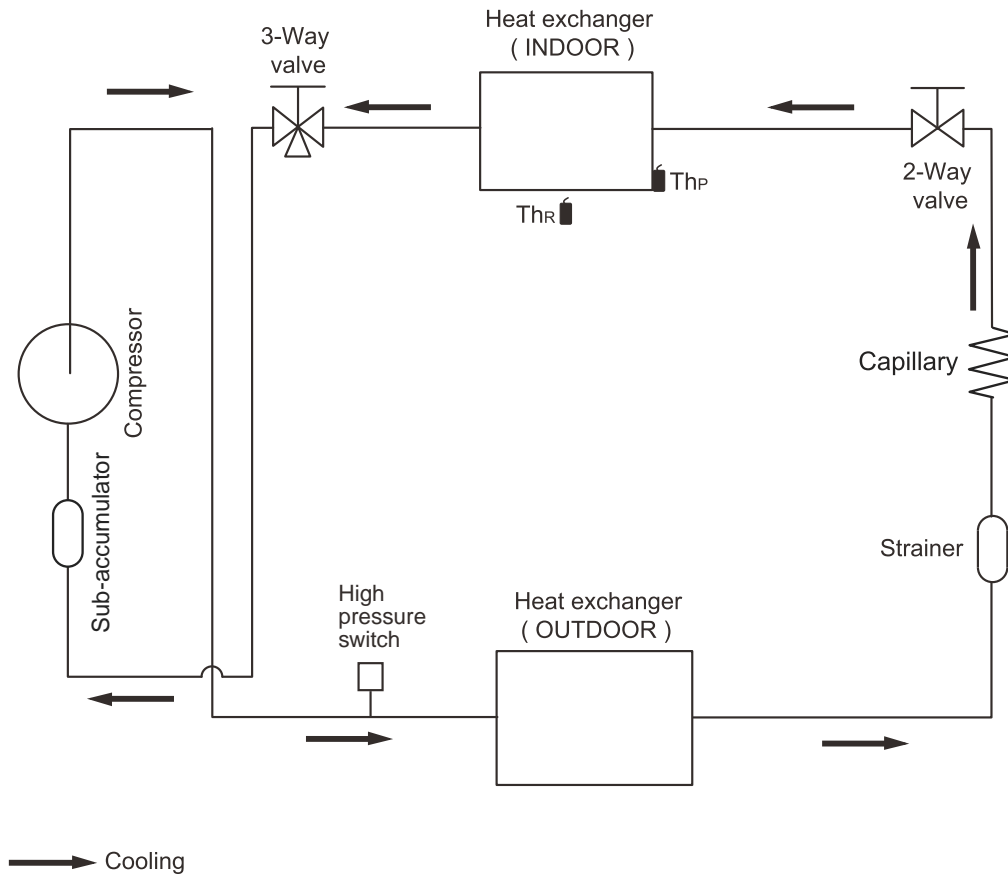


Th_R : Thermistor (Room Temp.)

Th_P : Thermistor (Pipe Temp.)


3-2. Models: AOGA36FRTAS, AOGA45FRTAS, and AOGA60-FRTAS

OUTDOOR UNIT
AOGA30-60F

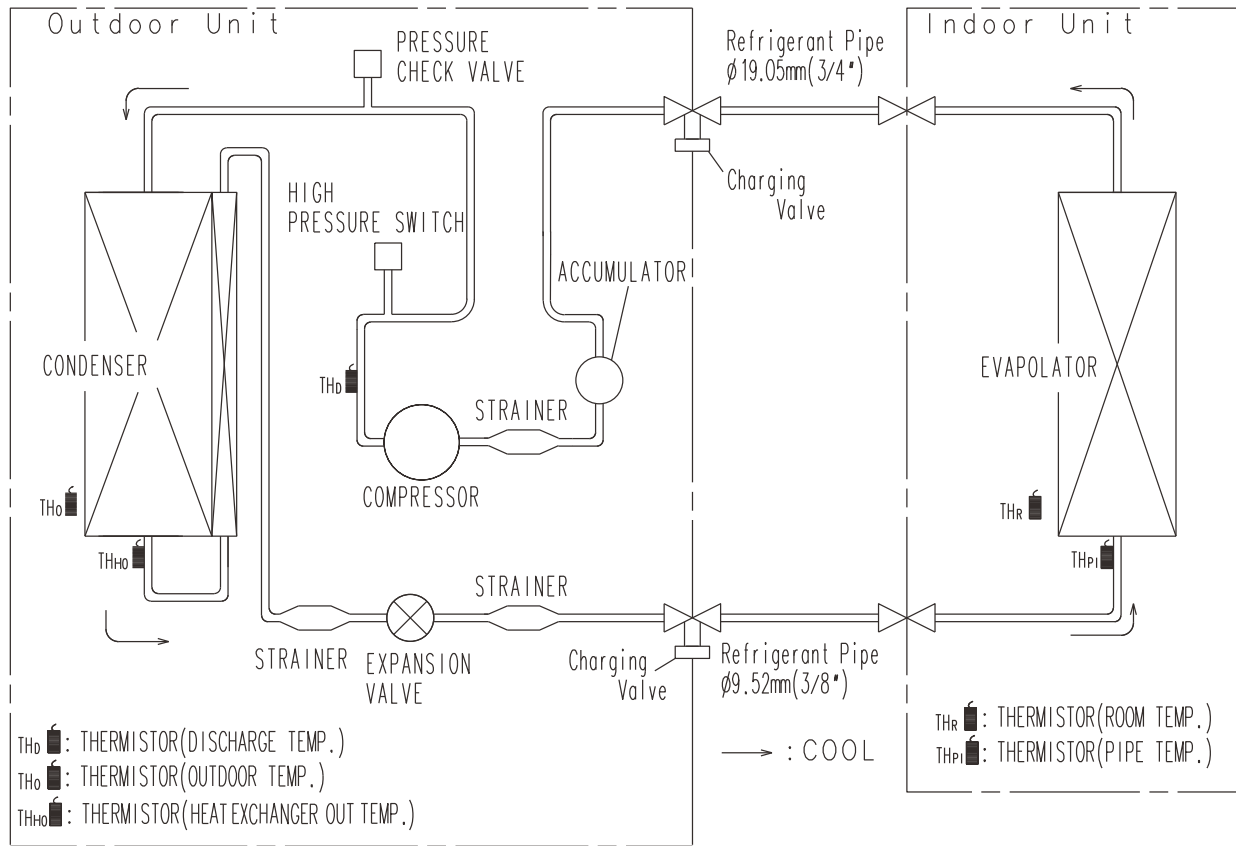

4. Wiring diagrams


4-1. Model: AOGA30FBTAS

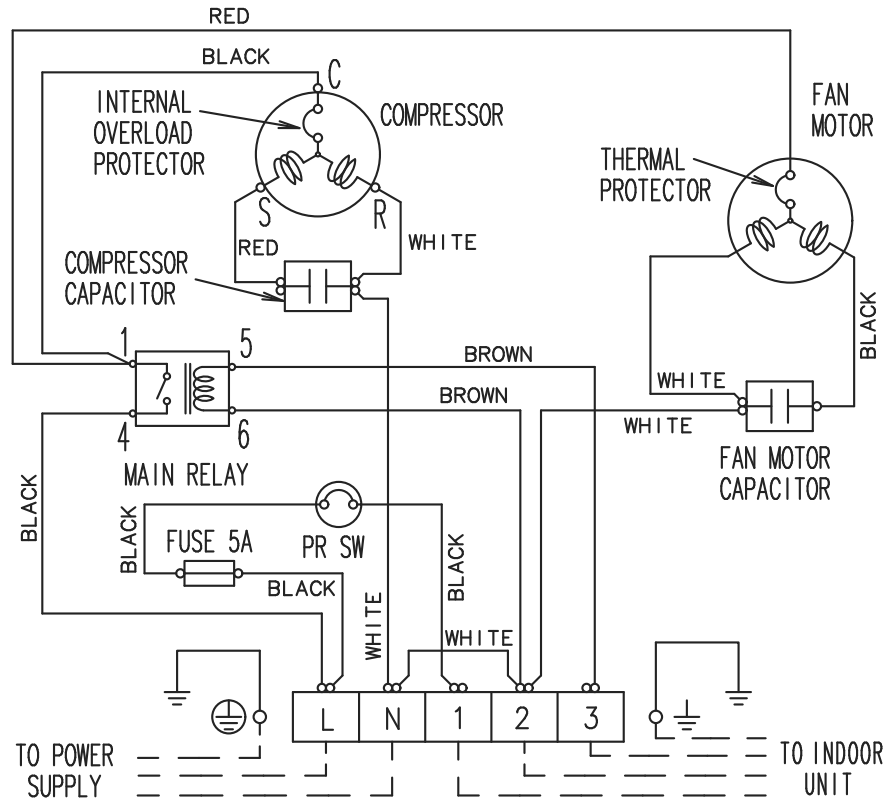


OUTDOOR UNIT
AOGA30-60F

4-2. Models: AOGA36FRTAS, AOGA45FRTAS, and AOGA60-FRTAS

OUTDOOR UNIT
AOGA30-60F

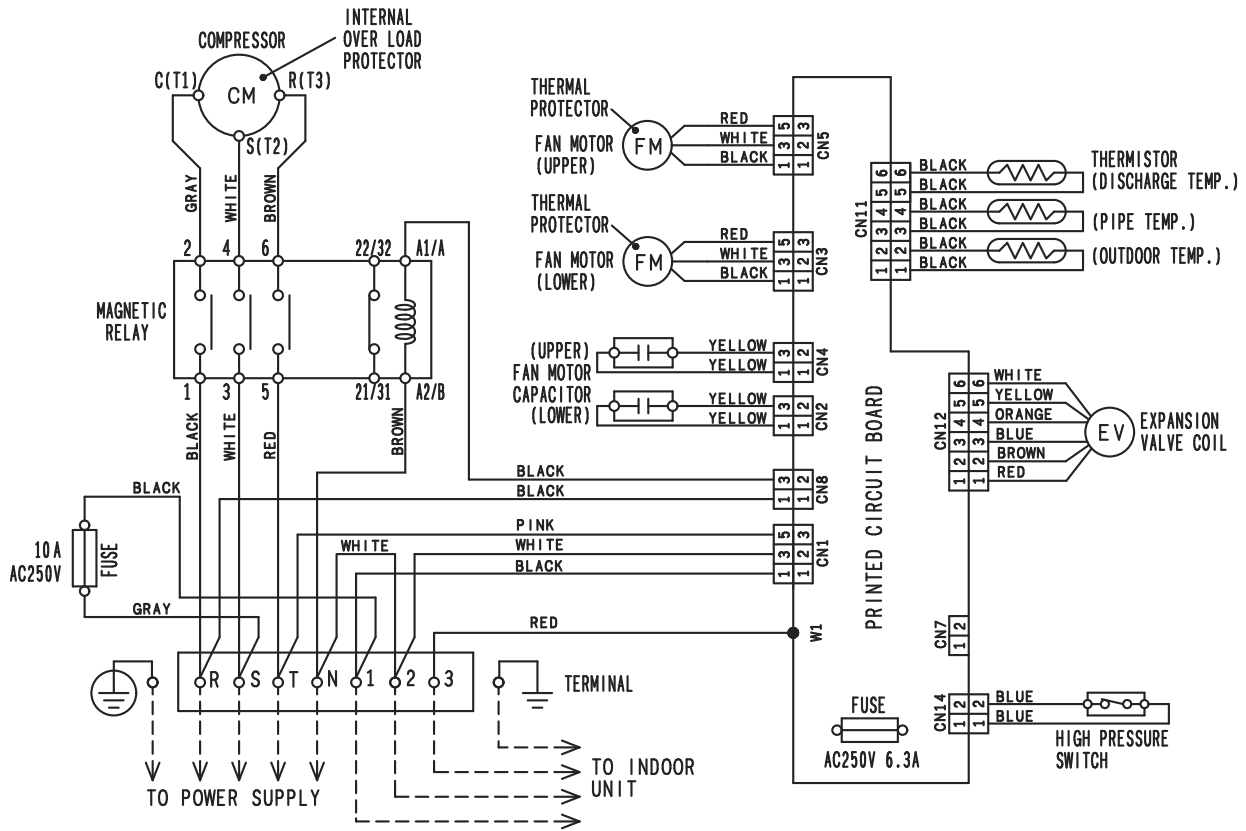

5. Capacity compensation rate for pipe length and height difference

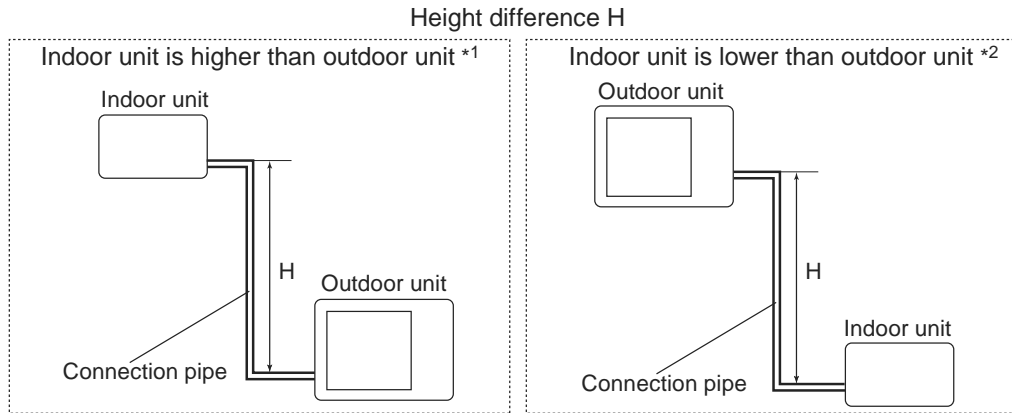

OUTDOOR UNIT
AOGA30-60F

5-1. Model: AOGA30FBTAS

NOTE: Values mentioned in the table are calculated based on the maximum capacity.

COOLING			Pipe length (m)					
			5	7.5	10	15	20	30
Height difference H (m)	Indoor unit is higher than outdoor unit *1	15	-	-	-	0.988	0.979	0.963
		10	-	-	0.996	0.988	0.979	0.963
		7.5	-	1.000	0.996	0.988	0.979	0.963
		5	1.027	1.000	0.996	0.988	0.979	0.963
		0	1.027	1.000	0.996	0.988	0.979	0.963
	Indoor unit is lower than outdoor unit *2	-5	1.018	0.992	0.988	0.980	0.972	0.955
		-7.5	-	0.988	0.984	0.976	0.968	0.951
		-10	-	-	0.980	0.972	0.965	0.948
		-15	-	-	-	0.964	0.956	0.940

5-2. Models: AOGA36FRTAS, AOGA45FRTAS, and AOGA60-FRTAS

NOTE: Values mentioned in the table are calculated based on the maximum capacity.

OUTDOOR UNIT
AOGA30-60F

COOLING		Pipe length (m)								
		5	7.5	10	20	30	40	50		
Height difference H (m)	Indoor unit is higher than outdoor unit *1	30	-	-	-	-	0.893	0.867	0.840	
		25	-	-	-	-	0.893	0.867	0.840	
		20	-	-	-	0.919	0.893	0.867	0.840	
		15	-	-	-	0.919	0.893	0.867	0.840	
		10	-	-	0.985	0.919	0.893	0.867	0.840	
		7.5	-	1.000	0.985	0.919	0.893	0.867	0.840	
		5	1.014	1.000	0.985	0.919	0.893	0.867	0.840	
		0	1.014	1.000	0.985	0.919	0.893	0.867	0.840	
		Indoor unit is lower than outdoor unit *2	-5	1.005	0.992	0.977	0.912	0.886	0.860	0.834
			-7.5	-	0.988	0.973	0.908	0.882	0.856	0.830
			-10	-	-	0.969	0.905	0.879	0.853	0.827
			-15	-	-	-	0.897	0.872	0.846	0.820
			-20	-	-	-	0.890	0.864	0.839	0.814
			-25	-	-	-	-	0.857	0.832	0.807
	-30		-	-	-	-	0.850	0.825	0.800	

6. Additional charge calculation

6-1. Model: AOGA30FBTAS

Refrigerant type		R410A
Factory charge amount	g	2500

■ Refrigerant charge

Total pipe length	m	7.5 or less	10	20	30 (Max.)	20 g/m
Additional charge amount	g	0	50	250	450	

6-2. Models: AOGA36FRTAS and AOGA45FRTAS

Refrigerant type		R410A
Factory charge amount	g	3400

■ Refrigerant charge

Total pipe length	m	20 or less	30	40	50 (Max.)	40 g/m
Additional charge amount	g	0	400	800	1200	

6-3. Model: AOGA60FRTAS

Refrigerant type		R410A
Factory charge amount	g	4300

■ Refrigerant charge

Total pipe length	m	20 or less	30	40	50 (Max.)	40 g/m
Additional charge amount	g	0	400	800	1200	

7. Airflow

7-1. Model: AOGA30FBTAS

● **Cooling**

Airflow	
m ³ /h	4400—4400
l/s	1222—1222
CFM	2590—2590

7-2. Models: AOGA36FRTAS, AOGA45FRTAS, and AOGA60-FRTAS

● **Cooling**


Airflow	
m ³ /h	5700—6100
l/s	1583—1695
CFM	3355—3590

8. Operation noise (sound pressure)

8-1. Noise level curve


■ Model: AOGA30FBTAS

● Cooling

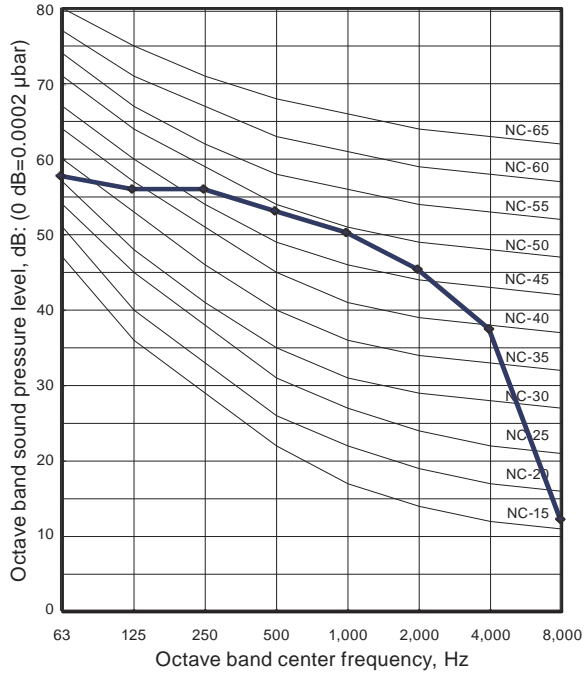

■ Model: AOGA36FRTAS


● Cooling

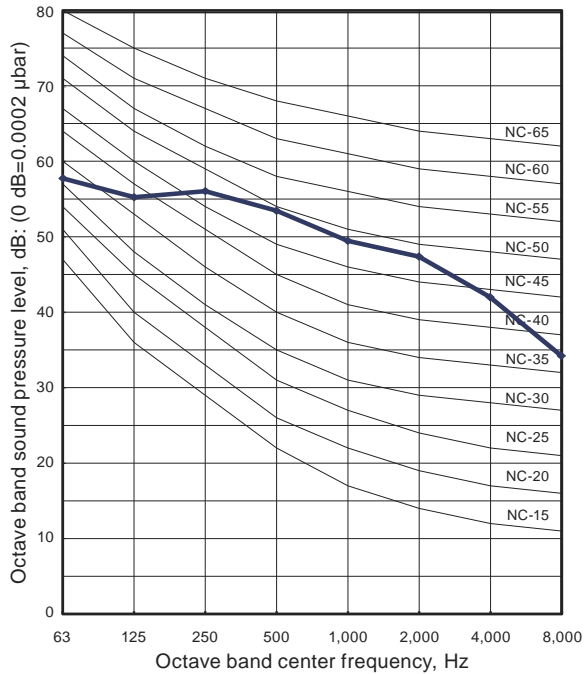

Model: AOGA45FRTAS


● Cooling

OUTDOOR UNIT
AOGA30-60F

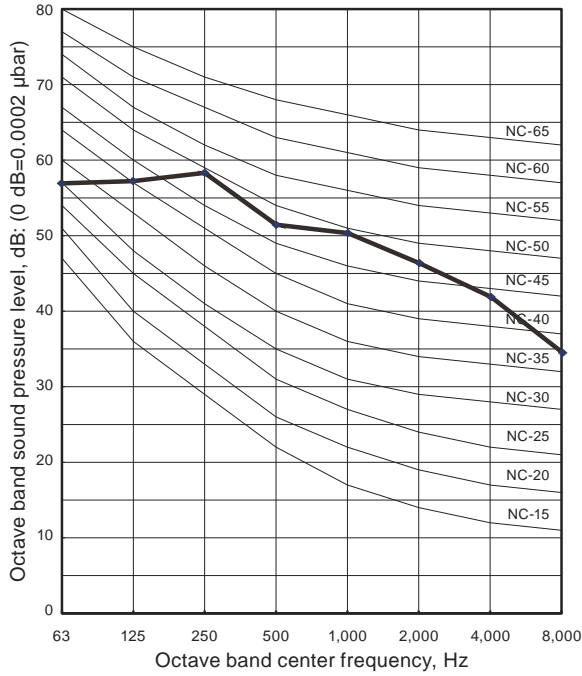


Model: AOGA60FRTAS

● Cooling

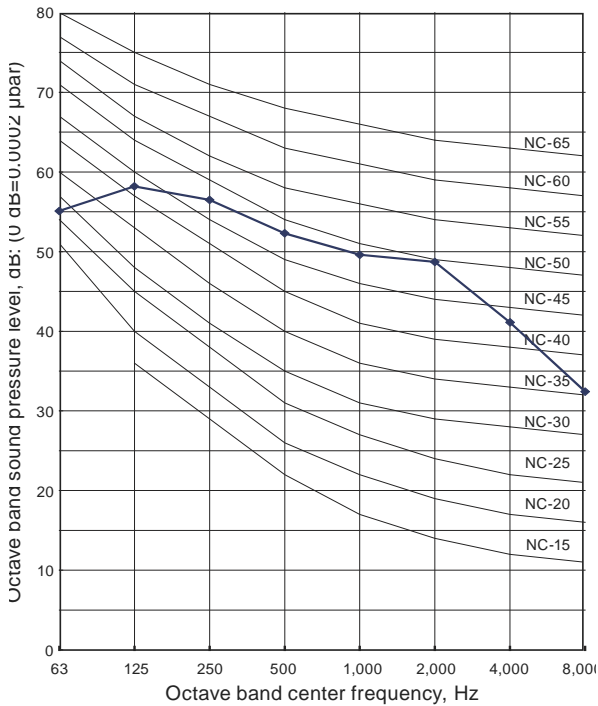

8-2. Sound level check point

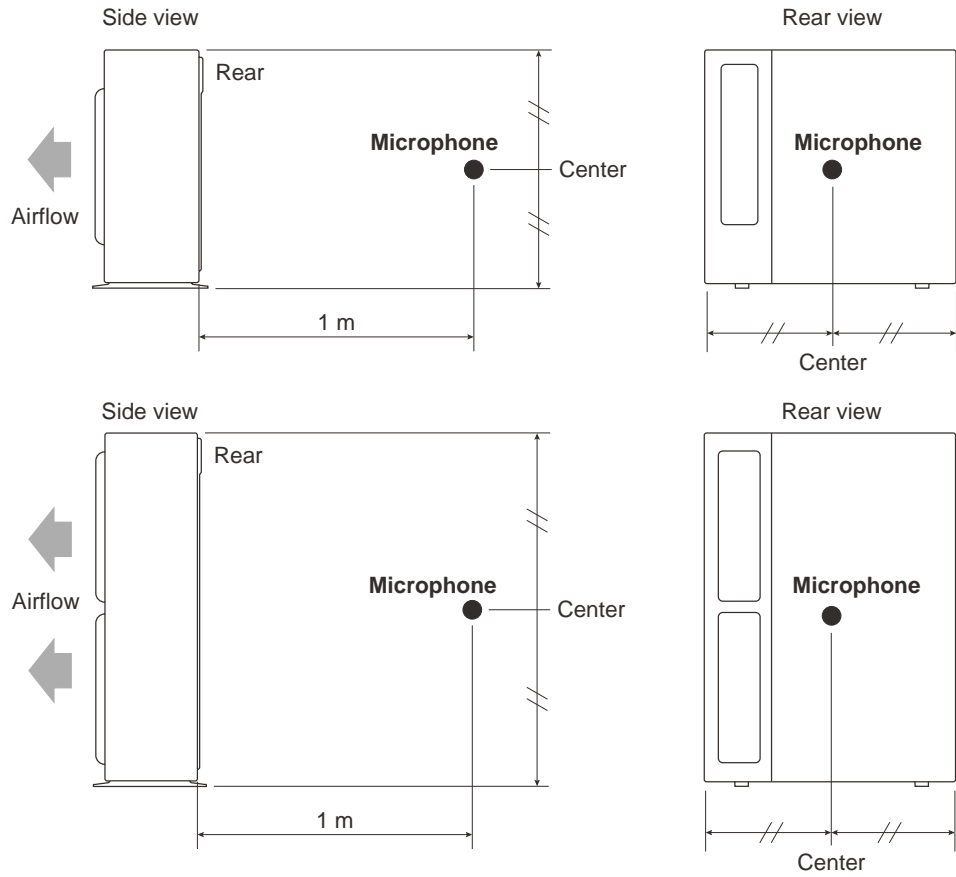

OUTDOOR UNIT
AOGA30-60F

NOTE: Detailed shape of the actual outdoor unit might be slightly different from the one illustrated above.

9. Electrical characteristics

Model name			AOGA30FBTAS	AOGA36FRTAS	AOGA45FRTAS	AOGA60FRTAS
Power supply	Voltage	V	220—240 ~	3N 380—415 ~		
	Frequency	Hz	50			
Max operating current *1		A	23.0	10.5	14.0	15.5
Starting current		A	60	43	47	67
Wiring spec. *2	Circuit breaker current	A	30	20		
	Earth leakage breaker	mA	30 (0.1 sec or less)			
	Power cable	mm ²	3.5—4.0	2.5—4.0		
	Connection cable *3	mm ²	1.5—2.5	1.0—2.5		
	Limited wiring length	m	31	51		

*1: Maximum current is the total current of the indoor unit and the outdoor unit.

*2: Selected sample based on Japan Electrotechnical Standards and Codes Committee E0005. As the regulations of wire size and circuit breaker differ in each country or region, select appropriate devices complied to the regional standard.

*3: Limit voltage drop to less than 2%. If voltage drop is 2% or more, increase cable conductor size.

10. Safety devices

Type of protection	Protection form		Model	
			AOGA30FBTAS	
Circuit protection	Current fuse (Near the terminal)		250 V, 5 A	
	Current fuse (Main PCB)		250 V, 6.3 A	
Fan motor protection	Thermal protection program	Activate	150 ± 5 °C Fan motor stop	
		Reset	96 ± 15 °C Fan motor restart	
High pressure protection	High pressure switch	Activate	4.9 MPa Compressor stop	
		Reset	3.8 MPa Compressor restart	
Compressor protection	Internal inherent motor protection	Activate	110 ± 5 °C Compressor stop	
		Reset	61 ± 9 °C Compressor restart First cycle trip: 51 A	
	Pressure relief valve (differential pressure range)	Activate	3.9—4.2 MPa	

Type of protection	Protection form		Model		
			AOGA36FRTAS	AOGA45FRTAS	AOGA60FRTAS
Circuit protection	Current fuse (Near the terminal)		250 V, 5 A		250 V, 10 A
	Current fuse (Main PC board)		250 V, 6.3 A		
Fan motor protection	Thermal protection program	Activate	150 ± 5 °C Fan motor stop		
		Reset	96 ± 15 °C Fan motor restart		
High pressure protection	High pressure switch	Activate	4.9 MPa Compressor stop		
		Reset	3.8 MPa Compressor restart		
Compressor protection	Thermal protection program (Discharge temp.)	Activate	120 °C Compressor stop		
		Reset	After 3 minutes and 90 °C or less Compressor restart		
	Internal inherent motor protection	Activate	120 ± 5 °C Compressor stop	145 ± 5 °C Compressor stop	125 ± 5 °C Compressor stop
		Reset	61 ± 9 °C Compressor restart First cycle trip: 37 A	61 ± 9 °C Compressor restart First cycle trip: 41 A	61 ± 9 °C Compressor restart First cycle trip: 51 A
Pressure relief valve (differential pressure range)	Activate	3.9—4.2 MPa			